

IMPORTANT

Read this manual carefully before assembling, using or servicing this stove
Keep this manual for future reference.

FOR YOUR SAFETY - IF YOU SMELL GAS

- Do not attempt to light the appliance.
- Extinguish any open flame.
- Disconnect from fuel supply.
- If smell persists leave the area.

! DANGER !

CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space can kill you.
- Never use this appliance in an enclosed space such as camper, tent, car or home.

! WARNING !

Misuse of this stove can lead to fire, explosion and serious
Personal injury to you or others. Follow all instructions provided.

CONTACT INFORMATION

If you should have any questions, problems or comments, please call our
Customer Service Department at 1-800-231-1402.
This Department is open from 8 AM-5 PM CST. M-F. www.texsport.com.

DANGER

NEVER USE THIS
APPLIANCE IN AN ENCLOSED
SPACE SUCH AS CAMPER, TENT,
CAR OR HOME.

USING IT IN AN ENCLOSED
SPACE CAN KILL YOU.

USE OUTDOORS
ONLY!



1. Wind baffle
2. Burner assembly & fuel jet
3. Burner control knobs
4. Valve adapter assembly
5. Propane cylinder (not included)
6. Paddlefoot plastic base

Thank you for buying a Texsport Authentic Adventure Gear product. We hope you enjoy your new propane appliance and that it will serve you for many years to come. We encourage you to read and understand each step of the set-up and safety operation instructions prior to working with this propane appliance.

FOR OUTDOOR USE ONLY

GENERAL SAFETY INFORMATION

- NEVER use in an enclosed area.
- DO NOT use stove while sleeping.
- DO NOT expose the propane cylinder to excessive heat.
- Never operate lantern with missing or damaged parts or mantles.
- Always inspect lantern, propane cylinder and connections for damage, debris or dirt before attaching the lantern to the propane cylinder.
- DO NOT USE AS A SPACE HEATER.
- Always attach/detach propane cylinder outdoors away from any open flame or pilot lights and only when the stove is cool.
- When storing or transporting stove, always disconnect the propane cylinder and store it in a cool, well ventilated location, in an upright position.
- Be sure connection to propane cylinder is tightly secure (hand tighten only) prior to each use.
- Never operate the stove near any flammable liquid or vapors. Keep all flammable or combustible materials beyond the clearance zone as indicated on the back panel of this booklet.
- Discontinue operation and close valve if:
 - ambient temperature drops below -10° F.
 - there is no fuel remaining in the propane cylinder
 - combustion becomes unstable
 - lighting cannot be performed quickly and easily
 - you experience repeated flame outs
- Never leave stove unattended when hot or in use.
- KEEP OUT OF REACH OF CHILDREN.

INSTRUCTIONS FOR USE

CONNECTING THE FUEL SOURCE – ASSEMBLE OUTDOORS

Step 1..... Only use the approved 16.4 oz/465 g disposable propane cylinder approved for use by the United States Department of Transportation DOT-NRC 232/290 M1110.

Step 2..... Make sure that the burner control valve knobs is turned off. Twist in a clockwise direction. 

Step 3..... Make sure regulator assembly rubber seal is clean and undamaged and in its proper centered position.

- Step 4 Attach the propane cylinder onto the regulator assembly (hand tighten only).
- Step 5 Please check all connections for leaks using soapy water. Bubbles will form if there is a leak present.
- Step 6 When you are sure there are no leaks, you may proceed to setup/ lighting your stove.

DO YOU SMELL GAS? IF YES, THERE IS A LEAK.

***IS THE CONNECTION AREA EXTREMELY COLD?
IF SO, THERE IS A LEAK!***

DO NOT USE STOVE IF IT IS LEAKING.

SETUP/LIGHTING YOUR STOVE

- Step 1Place a flame source near the face of the burner and at the same time open the control valve to a low or medium setting. Gas will begin to flow and the burner will ignite.
- Step 2If stove fails to light, turn off the valve. Allow any gas to dissipate and repeat Step 1.

USING YOUR STOVE

- Step 1After burner has ignited, adjust to desired heat level.
- Step 2While ignited DO NOT touch the cooking area. Only the control knob should be touched during operation.
- Step 3Stove surface is very hot and should not be handled or moved, except after being shut down.
- Step 4Allow stove to cool for 15 minutes before moving or storage.

MAINTENANCE

Be sure to keep equipment clean and make sure burner is always unobstructed. Propane appliances seldom require service as long as you keep valves and orifices away from dirt and dust. Always blow the valve clean before connecting it to a cylinder.

IF DAMAGED DO NOT USE THE APPLIANCE AND CONTACT TEXSPORT CUSTOMER SERVICE @ 800-231-1402 8AM TO 5PM CST MON-FRI.

**DO NOT PERFORM MAINTENANCE WHILE THE STOVE IS STILL HOT.
PLEASE ALLOW ADEQUATE TIME TO COOL.
MINIMUM CLEARANCE TO FLAMMABLES OR COMBUSTIBLES**

Please keep all combustible and/or flammable materials away from the stove at a minimum distance of 12" from the sides and 48" from above.



ONE YEAR LIMITED WARRANTY!

Texsport warrants to the original consumer purchaser that this stove is free from defects in materials and workmanship for a period of one (1) year from the date of purchase. All implied warranties relating to this product, including without limitation, the warranties of merchantability and fitness for a particular purchase, are also limited in duration to one (1) year from the date of purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty extends to the original consumer purchaser only and does not extend to subsequent purchasers or other transferees. This warranty does not cover damage for wear and tear, abuse, improper use or alteration and it is the sole express warranty relating to this product. Call the Texsport Consumer Relations Department at 1-800-231-1402, a sales receipt with date of original purchase is required and must accompany the return of the defective product. **THERE IS HEREBY EXCLUDED FROM THIS WARRANTY ANY LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT, PUNITIVE OR EXEMPLARY DAMAGES OR LOST PROFITS RESULTING FROM ANY BREACH OF THIS WARRANTY OR OTHERWISE.** Some states do not allow the exclusion may not apply to you. This warranty gives you specific legal right, and you may also have other rights which vary from state to state.

#14213

NOTE: THIS IS NOT A WARRANTY REGISTRATION CARD