

Dual Agricultural Bead Breaker - For Inner Bead on Duals

Model #10106

 


Heavy Duty; uses 10 Tons of Bead Breaking Force

Breaks the inner bead on dual farm tractor tires.

- Requires just 3" of operating space between the dual tractor tires.
- No need to remove the outside wheel to change the tire on the outside dual.
- Use with a 10,000 psi air/hydraulic pump.
 - Weight: 54 lbs. | 25 kg





10106 - Bead Breaker

10500 - Pump, Hydraulic 3.5 Quart

10604 - Hose Assembly with Hose Coupler, 8' 10601K - Air Reducer, 6" Whip-Hose





Slide Hammer Bead Breaker- Manual Style Bead Breaker

Model #70150





MODEL 70150



- Breaks the most stubborn beads with ease.
- Reduces user fatigue with its spring action design.
- This design prevents slide hammer kick back.
- The wedge foot is forced between the bead and rim flange, delivering blow directly to
- Heavy duty tool, will not break.
- Comparable to the Ken Tool T26B.
- Weight: 24 lbs. | 11 kg

Manual Bead Breaker - For Small ATV Tires and Up

Model #70160



MODEL 70160

- Loosens tire bead from the rim with leverage.
- Excellent for working on the tire without removing the wheel.
- Will handle 38" and 42" 14-ply farm tractor and backhoe tires with drop center rims to small ATV and lawn mower tires.
- Operates with air ratchet wrench or ratchet & socket.
- Reinforced Bead Hook with Steel Brackets to Create better leverage on rim & add dexterity.
- DO NOT USE AIR IMPACT TOOL
- Weight: 12 lbs. | 5 kg



