



Quick Start Guide


It's as easy as 1,2,3

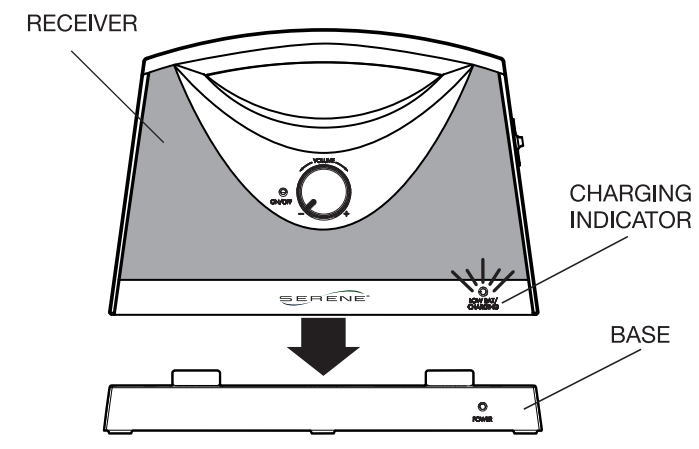

- 1. Charging Your TV-SB Before First Use:**
1. Place the Receiver on the Base to charge for 6+ hours or until the Lo Battery/Charging Indicator stops flashing and turns steadily lit.

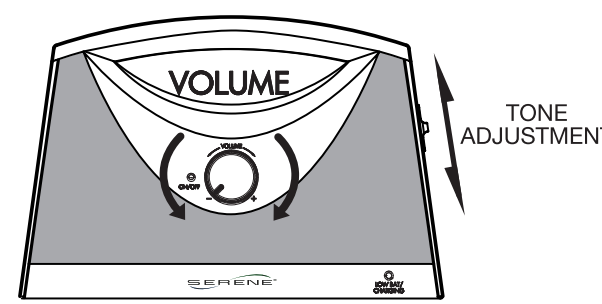

- 2. Receiver On/Off, Volume and Tone Adjustment:**
1. Turn Volume knob to turn the Receiver ON or OFF.
 2. Rotate the Volume knob to adjust volume
 3. Select Tone to the setting that gives you the best voice clarity.

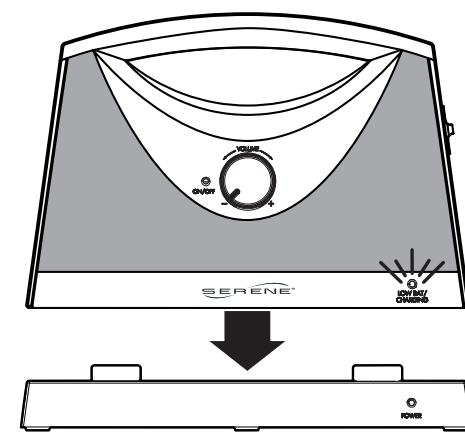

- 3. Low Battery and Recharging:**
1. Place Receiver on its base for recharging when Lo Battery/Charging Indicator flashes or when Receiver is not in use.
 2. Charging is complete when the Charging Indicator stops flashing and turns steadily lit.

**Need Help? Call Toll-free Help Line:
(866)-376-9271 (8AM - 5PM PST, M-F)**



Serene Innovations, Inc. 14731 Carmenita Rd., Norwalk, CA. 90650
www.sereneinnovations.com P:(866) 376-9271 F:(562) 483-2087

TV SoundBox™ Wireless TV Speaker Connection Reference Guide

1. TV with AUDIO ANALOG OUT, connect TV SoundBox™ to the TV as shown:

**If Audio Connections Are Occupied By Another Device, Use Y Splitters (provided) As Shown In Diagram A.*

2. TV with no AUDIO ANALOG OUT and a headset jack, connect the TV SoundBox™ using the headset jack on your TV.

**If Audio Connections Are Occupied By Another Device, Use Y Splitters (provided) As Shown In Diagram A.*

3. TV with no AUDIO ANALOG OUT can connect the TV SoundBox™ to your TV through the AUDIO ANALOG OUT on your Cable Box, Satellite Box, Set Top Box, DVD Player, Blue-ray Player or Gaming Console (sold separately), as shown.

**If Audio Connections Are Occupied By Another Device, Use Y Splitters (provided) As Shown In Diagram A.*

4. TV with no AUDIO ANALOG OUT, connect TV SoundBox™ to your TV with a Digital Audio Converter (sold separately), as shown:

Note: This Converter must be switched to Optical

5. TV with NO ANALOG OUT, connect TV SoundBox™ to your TV using a HDMI-ANALOG Converter (sold separately)

**If Audio Connections Are Occupied By Another Device, Use Y Splitters (provided) As Shown In Diagram A.*

6. For an older model TV with a Digital TV Converter and antenna (or "rabbit ears"), connect the TV SoundBox™ to your TV through the Digital TV Converter, as shown:

**If Audio Connections Are Occupied By Another Device, Use Y Splitters (provided) As Shown In Diagram A.*

7. If no solutions listed are ideal for your TV, connect the TV SoundBox™ to your TV with an external microphone, provided by Serene Innovations, at no charge, upon your request.

*** Diagram A:** If Audio Connections Are Occupied By Another Device, Use Y Splitters (provided) As Shown: