

INSTRUCTION SHEET FOR TOOL #1008-5 & 1008-TS



No. 1008-5

5-SPEED TRANSMISISON STAND USE ON ALL RUBBER MOUNT 5-SPEED TRANSMISSIONS, EXCEPT 1993-PRESENT FLT AND ALL DYNA MODELS.

No. 1008-TS

4 & 5-SPEED TRANSMISISON STAND USE ON BIG TWIN 4 AND 5-SPEED FXST 1986-PRESENT.

FIG 2

Refer to H-D® Service Manual for specifications.

- 1. Clamp in vice, or bolt to bench by drilling hole through legs, front and rear.
- 2. Slip rear of transmission in between the two uprights, slip bolt #2034 through uprights and transmission, install washer #2031 and lubed nut #2035. Tighten nut until it is snug.
- 3. If the transmission your working on is an early model, (the ones that have a bolt on front mount) transmission will set on top of front plate, use a 3/8" bolt and nut to square transmission to stand.
- 4. If the transmission is a late model, (front mount is part of case) mount is held from the bottom of front plate by a 3/8-16 x 1" bolt. See Fig 1.

For 1008-TS

- 1. Secure tool as shown in Fig. 2 to bottom of transmission case. Use your transmission mounting nuts and washers to mount tool as shown.
- 2. Turn case over and secure the L shaped bracket into vise. See Fig. 2

Performance Parts For Harley-Davidson Motorcycles

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-9224

No.1008-IS



REV B 6-13

INSTRUCTION SHEET FOR TOOL #1008-5 & 1008



No. 1008-5

5-SPEED TRANSMISISON STAND USE ON ALL RUBBER MOUNT 5-SPEED TRANSMISSIONS, EXCEPT 1993-PRESENT FLT AND ALL DYNA MODELS.

No. 1008-TS 4 & 5-SPEED

TRANSMISISON STAND
USE ON BIG TWIN 4 AND 5-SPEED
FXST 1986-PRESENT.



Refer to H-D® Service Manual for specifications.

- 1. Clamp in vice, or bolt to bench by drilling hole through legs, front and rear.
- 2. Slip rear of transmission in between the two uprights, slip bolt #2034 through uprights and transmission, install washer #2031 and lubed nut #2035. Tighten nut until it is snug.
- 3. If the transmission your working on is an early model, (the ones that have a bolt on front mount) transmission will set on top of front plate, use a 3/8" bolt and nut to square transmission to stand.
- 4. If the transmission is a late model, (front mount is part of case) mount is held from the bottom of front plate by a 3/8-16 x 1" bolt. See Fig 1.

For 1008-TS

- 1. Secure tool as shown in Fig. 2 to bottom of transmission case. Use your transmission mounting nuts and washers to mount tool as shown.
- 2. Turn case over and secure the L shaped bracket into vise. See Fig. 2



555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-9224