


# INSTRUCTIONS

## DOOR ALIGNER TOOL

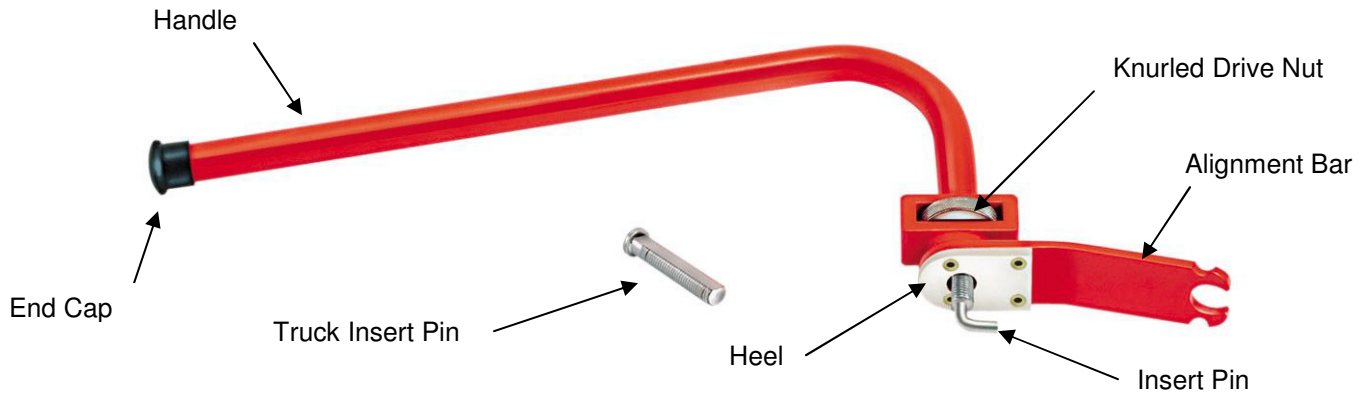

Open vehicle door. Slide Insert Pin into the open door latch until it completely locks.



Rotate Knurled Drive Nut clockwise until the Heel is flush with the door. Do not over tighten.



Move the door towards the door jam and rest the Alignment Bar on the door catch (You can use the center opening or either notch on the Alignment Bar).



Gently move the handle up or down to adjust the door to the desired position.

Remove the Door Aligner Tool by (1) opening the door, (2) turning the Knurled Drive Nut counterclockwise, (3) opening the door latch and (4) sliding the Insert Pin out of the door latch.

For trucks, unthread the "L" shaped Insert Pin and thread in the Truck Insert Pin. Then, follow above instructions. (For your convenience the Truck Insert Pin is stored in the handle. To access, just remove the black End Cap.)