



## SWDA Instructions



### SPECIFICATIONS

**SENSOR:** Passive Infrared (PIR) motion detector  
Transmitter: 433.92MHz, range up to 400 ft (if no obstructions) from Receiver  
Sensor Detection: 110-angle coverage up to 26 ft if mounted 4 ft high  
Battery: 3 AAA batteries (not included)  
Low battery LED indicator

**RECEIVER:** Range up to 400 feet (if no obstructions) from Sensor  
Battery: 3C (not included)  
Power Switch: ON/OFF  
Sound volume: Adjustable  
Sound choice: Chime or 4 Alarm sounds  
Input port for 5V DC Adapter (not included)  
**IMPORTANT:** Remove the batteries if you choose to use the AC adapter  
Low battery LED indicator

### INSTALLING BATTERIES

1. Using a screwdriver, remove the battery cover on the back of the Sensor, and insert 3 AAA batteries (not included), according to the polarity indicated in the battery compartment. Replace the battery cover.
2. Using a screwdriver, remove the battery cover on the back of the receiver and insert 3 C batteries (not included) according to the polarity indicated in the battery compartment. Replace the battery cover.

**IMPORTANT:** Do not install batteries of different types, charge levels, or capacities.

**NOTE:** An optional 5 volt, 500mA power adapter (not included) can be used to power the Receiver in place of batteries.

## MOUNTING THE SENSOR AND RECEIVER

**IMPORTANT:** *The passive infrared Sensor detects heat. Avoid pointing it towards areas that produce heat such as heater vents, windows where the sun enters, or outdoor spotlights.*

1. Mount the Sensor at least 3 feet above the ground.
2. If placed above 6 feet high, the Sensor should be angled downward toward the area being monitored.
3. Using the included hardware, mount the Sensor securely to a flat surface.
4. Place the Receiver within 400 feet of the Sensor noting that obstructions will greatly reduce this range.
5. Using the included hardware, mount the Receiver to a flat surface or set on a table or countertop.

**IMPORTANT:** *Do not place the Receiver in a location that will get wet as it is not weather resistant.*

## OPERATION

1. To operate the Driveway Alert, slide the Power Switch on the Receiver to the "ON" position.  
Allow 15 seconds to warm-up.
2. Press the Volume button to your desired decibel level.
3. Press the Sound button to select either a chime sound or one of the 4 alarm sounds.
4. Mount the Sensor in your desired location. Test it by walking or driving into the protected area. Another person should be listening for it to sound.
5. Adjust the Sensor position or range as necessary.

## LOW BATTERY INDICATORS

1. Receiver: Replace the batteries, when the LED no longer flashes when the Receiver sounds.
2. Sensor: Replace the batteries when the LED flashes fast.

## WARRANTY INFORMATION

*Cutting Edge Products, Inc.* extends a ONE YEAR WARRANTY to the **SWDA** for defects in materials or workmanship, with the following exceptions:

1. The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture or water damage to the Receiver, or loss of parts.
2. The warranty will be voided if the unit has been opened or tampered with in any way (unless by an authorized dealer) or if any unauthorized replacement parts have been used.
3. The warranty will be voided if the unit is damaged while attempting to power it with both an AC adapter and batteries simultaneously.
4. The warranty will be voided if the unit shows corrosion in the battery compartment caused by long term storage with the batteries installed.

## CONDITIONS OF SALE

Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

## TO OBTAIN SERVICE

Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandise Authorization. The return unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.