

### **USER'S MANUAL Outdoor Kitchen Playset** TP10013

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

#### Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

### **Follow Costway**











## **Contact Us!**

#### Do NOT return this item.

Contact our friendly customer service department for help first.



## **Before You Start**

Please read all instructions carefully and keep it for future reference.

#### **General Security Warning**

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and


children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping.





#### **Warning for Assembly**


- ⚠ Remove all Packaging, separate and count all parts and hardware.
- $\triangle$  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- $\triangle$  Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

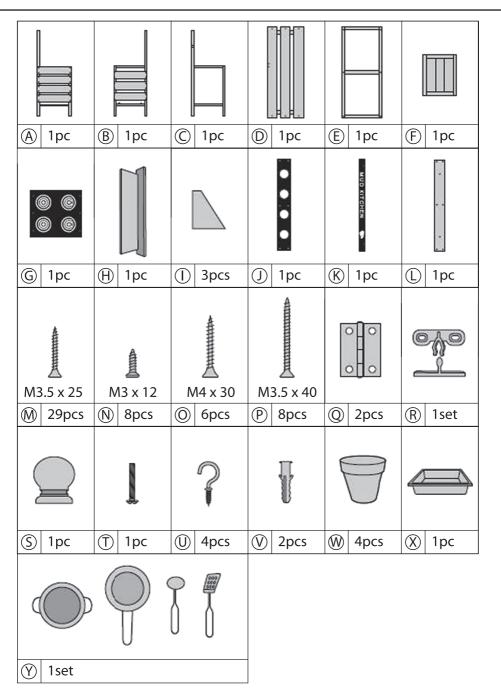



#### STEP 1

 


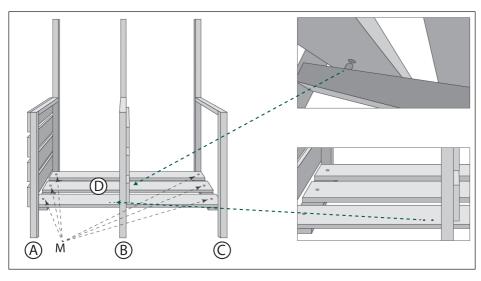


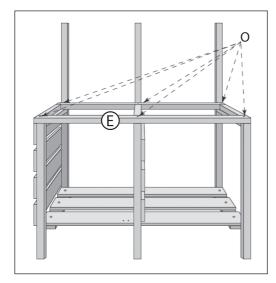

 


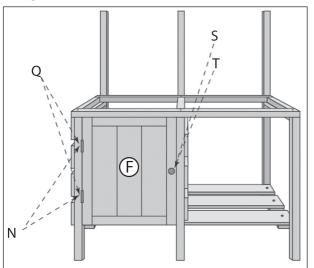

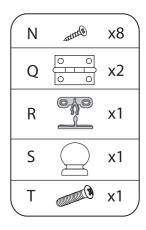


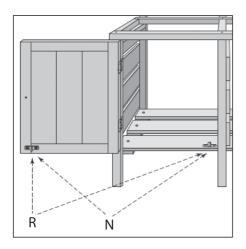

#### STEP 4

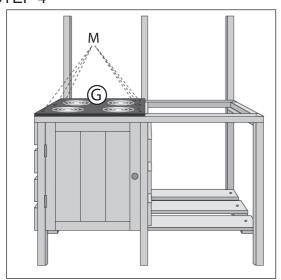





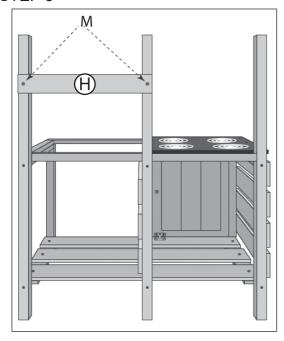




#### STEP 6

 

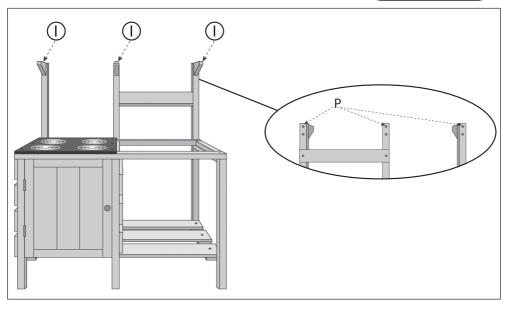

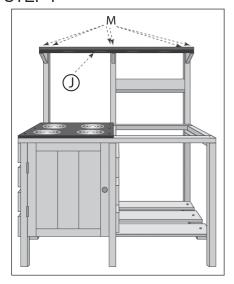



#### STEP 8



