

Installation Instructions for P-GRV-502

1. Turn thumbwheel counter clockwise until pin inside post hole cannot be seen.
2. **Insert string through post hole and pull through, leaving enough slack for one rotation of post.**
3. Turn thumbwheel clockwise until tight. Pin inside post hole has now locked the string.
4. Bring string to pitch.

