 




IN THE BOX

Make sure you have everything shown here.

i This remote must be paired to and used with a Security Brands Ridge 2.0 Transceiver (Model 14-REC20) to work correctly.

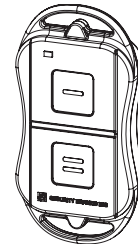

 
Ridge Remote



Visor Clip

WHAT'S WHAT


The Ridge Remote has two programmable buttons and a status LED. Each button can be paired to a separate transceiver or the same transceiver and set to different modes of operation.

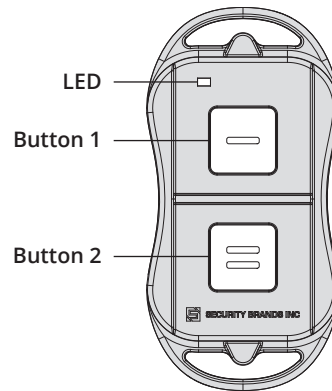


BASIC SETUP

1. On Ridge 2.0 Transceiver, hold down PROGRAMMING PAIR button for three seconds and release. PROG LED will light up.

 NOTE: The transceiver must be powered up and have its cover removed for this step. Please see the instructions that came with it for help.

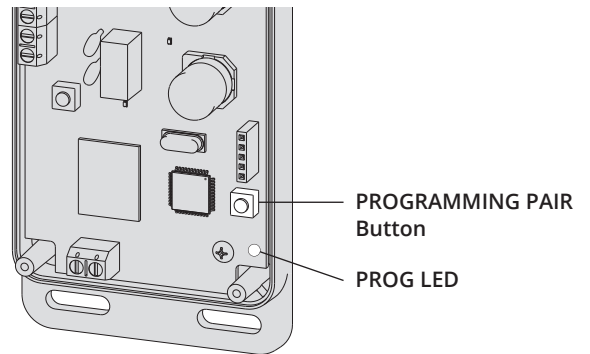


 2. On Ridge Remote, press and hold down both buttons and pay attention to remote LED.

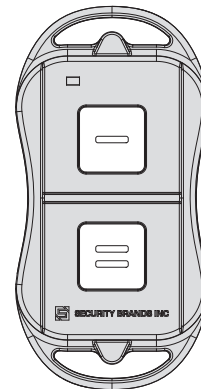


3. When LED flashes twice, continue holding button you want to program and release other button.
4. When LED flashes again, release button. Button is now programmed.
5. Repeat procedure for second button if desired.

 NOTE: The second button can be paired with the same or a different Ridge 2.0 Transceiver.

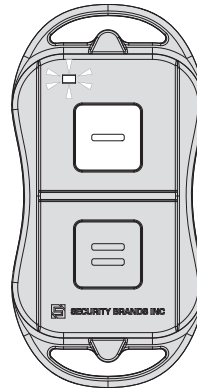

 Step 3

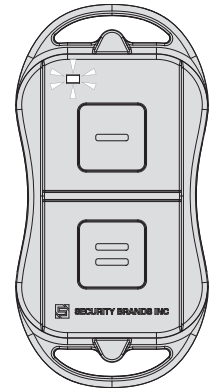

Step 4

MODE SELECTION (MOMENTARY/LATCH)

1. On Ridge Remote, press and hold down both buttons and pay attention to remote LED.
2. When LED flashes twice, continue holding **both** buttons.
3. When LED flashes twice again, continue holding button you want to change modes on until LED flashes multiple times to confirm mode change.

NOTE: If the relay on the Ridge 2.0 Transceiver is already latched (on), it cannot be unlatched unless the remote button is set to latch mode.

NOTE: If needed, follow the same procedure for the second button.

HOW TO USE

1. Make sure you are in range of Ridge 2.0 Transceiver you want to control.
2. Press remote button paired to transceiver long enough for LED to flash.
3. Transceiver will respond and operate gate/door.

NOTE: If the transceiver does not respond, make sure the remote LED is flashing when a button is pressed. If it is not, check the battery. If it still does not respond, complete the pairing procedure again.



Go to securitybrandsinc.com/ridge/ for more helpful resources.



WARNING! AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH! ALWAYS CHECK THAT THE GATE PATH IS CLEAR BEFORE OPERATING! REVERSING OR OTHER SAFETY DEVICES SHOULD ALWAYS BE USED!



NEED
HELP

call
(972) 474-6390
or email
techsupport@securitybrandsinc.com

Two-Year Limited Warranty
Visit securitybrandsinc.com/warranty/ for details



SECURITY BRANDS INC™
your *partner* in access control