

Parts list

No.	Description	QTY	No.	Description	QTY
1	Oil Reservoir	1	43	O-ring	3
2	Gasket	1	44	Nylon Gasket	2
3	Filter	1	45	Valve Connector	1
4	Oil Pipe	1	46	Spring	1
5	Steel Ball	1	47	Valve Assembly	1
6	Retainer	1	48	O-ring	1
7	Copper Washer	1	49	Nylon Gasket	1
8	Valve	1	50	Release Valve Seat	1
9	Safety Valve	1	51	Tube	1
10	Steel Ball	1	52	Spring	1
11	Ball Seat	1	53	Oil Release Valve Rod	1
12	Safety Valve Spring	1	54	Seal	1
13	Safety Valve Adjusting Screw	1	55	Panel	1
14	Copper Washer	1	56	Copper Washer	6
15	Pump Cylinder	1	57	Socket Head Cap Screw	6
16	Y-seal	1	58	O-ring	1
17	Nylon Gasket	1	59	Base	1
18	Copper Washer	1	60	Exhaust Muffler	1
19	Nut	1	61	Socket Head Cap Screw	2
20	Spring	1	62	Round Filter	1
21	O-ring	2	63	Gasket	1
22	Steel Ball	4	64	Foot Pedal	1
23	Air Pump Housing	1	65	Spring	1
24	Washer	1	66	Coupler	1
25	Cylinder Pump Plunger	1	67	Valve	1
26	Piston	1	68	Seal	1
27	O-ring	2	69	Air Valve Rod	1
28	Air Shuttle Valve	1	70	O-ring	1
29	O-ring	2	71	O-ring	1
30	Piston Cover	1	72	Switch Coupler	1
31	O-ring	3	73	E-Clip	2
32	Socket Head Cap Screw	3	74	Shaft	1
33	Shuttle Valve Seal	1	75	Socket Head Cap Screw	2
34	O-ring	2	76	Flat Washer	2
35	Rear Cover	1	77	Lock Bracket	1
36	O-ring	4	78	Seal	1
37	O-ring	6	79	Breather Plug	1
38	Socket Head Cap Screw	8	80	O-ring	1
39	Socket Head Cap Screw	2	81	Vent Bolt	1
40	Coupler	1	82	Copper Washer	1
41	Steel Ball	1			
42	Spring	1			