

# VESTIL MANUFACTURING CORP.

2999 North Wayne Street, P.O. Box 507, Angola, IN 46703 Telephone: (260) 665-7586 -or- Toll Free (800) 348-0868 Fax: (260) 665-1339

www.vestilmfg.com e-mail: sales@vestil.com

# INSTRUCTION MANUAL



## **Receiving instructions:**

After delivery, IMMEDIATELY remove the packaging from the product in a manner that preserves the packaging and maintains the orientation of the product in the packaging; then inspect the product closely to determine whether it sustained damage during transport. If damage is discovered during the inspection, <u>immediately</u> record a complete description of the damage on the bill of lading. If the product is undamaged, discard the packaging.

## NOTES:

1) Compliance with laws, regulations, codes, and non-voluntary standards enforced in the location where the product is *used* is exclusively the responsibility of the owner/end-user.

2) VESTIL is **not liable** for any injury or property damage that occurs as a consequence of failing to apply either: a) the instructions in this manual; or b) information provided on labels affixed to the product. Neither is Vestil responsible for *any* consequential damages sustained as a result of failing to exercise sound judgment while assembling, installing, using or maintaining this product.

Table of Contents
Hazard identification: explanation of signal words2
Safety Guidelines2
Exploded parts diagrams and bills of materials
Label placement diagram
Limited warranty

## HAZARD IDENTIFICATION: explanation of signal words

This manual uses SIGNAL WORDS to indicate the likelihood of personal injuries, as well as the probable seriousness of those injuries, if the product is misused in the ways described. Other signal words call attention to uses of the product likely cause property damage.

The signal words used appear below along with the meaning of each word:

	Identifies a hazardous situation which, if not avoided, <u>WILL</u> result in DEATH or SERIOUS INJURY. Use of this signal word is limited to the most extreme situations.
<b>A</b> WARNING	Identifies a hazardous situation which, if not avoided, COULD result in DEATH or SERIOUS INJURY.
<b>ACAUTION</b>	Indicates a hazardous situation which, if not avoided, COULD result in MINOR or MODERATE injury.
NOTICE	Identifies practices likely to result in product/property damage, such as operation that might damage the product.

Each person who assembles, installs, uses, or maintains this product should read the entire manual and fully understand the directions in advance. If after reading the manual you do not understand an instruction, ask your supervisor or employer for clarification, because failure to adhere to the directions in this manual might result in serious personal injury.

## SAFETY GUIDELINES

Vestil diligently strives to identify foreseeable hazards associated with the use of its products. However, material handling is inherently dangerous and no manual can address every conceivable risk. The end-user ultimately is responsible for exercising sound judgment at all times.

**ADANGER** Electrocution might result if any part of the product contacts electrified wires. Reduce the likelihood of electrocution by applying **common sense**:

- > DO NOT *contact* electrified wires with any part of this device, your body, or clothing.
- > DO NOT use or store the product where contact with electrified wires is likely.
- > Always inspect the usage area before using the product & implement precautions that account for conditions.

**AWARNING** If this product is used improperly or carelessly, the operator and/or bystanders might sustain serious personal injuries or even be killed. To reduce the likelihood of injury:

# • Failure to read and understand the entire manual before assembling, installing, using or servicing the product <u>is a misuse</u> of the product.

• Read the manual to refresh your understanding of proper use and maintenance procedures.

• DO NOT attempt to resolve any problem(s) with the product unless you are both authorized to do so and <u>certain</u> that it will be safe to use afterwards.

• DO NOT modify the product in any way UNLESS you first obtain written approval from Vestil. Unauthorized modifications automatically void the Limited Warranty and might make the product unsafe to use.

- DO NOT exceed the maximum rated load (see Label 287 on product).
- Inspect the product before each use.
  - A. DO NOT use this product if the inspection reveals structural damage. Examples of structural damage include, but are not limited to, the following: 1) Cracked, broken or significantly deformed load-bearing members; 2) cracked welds; 3) missing or deformed safety chain/strap; 3) corrosion, severe wear, or other condition that affects the ability of the product to support weight or itself. Replace each part that fails to pass an inspection, and DO NOT use the product until it is <u>fully</u> restored to normal condition.
  - B. DO NOT use the product if any unusual noise or movement is observed. If a malfunction occurs, remove the unit from service and notify your supervisor & maintenance personnel about the issue.

• DO NOT use this device UNLESS all product labels (see "Label Placement Diagram") are readable and undamaged.

**NOTICE** Proper use, maintenance, and storage are essential for this product to function properly.


• Always use this product in accordance with the instructions in this manual and consistent with any training relevant to machines, devices, etc. used in conjunction with this product.

• Keep the product clean & dry. Lubricate moving parts.

 FOR HYDRAULIC UNITS: Do not use brake fluid or jack oils in the hydraulic system. If oil is needed, use an antiwear hydraulic oil with a viscosity grade of 150 SUS at 100°F, (ISO 32 cSt @ 40°C), or Dexron transmission fluid.

• Contact the manufacturer for MSDS information

WeiGHT: 228.04       CRM       CRM       CR       CA       CA <td< th=""><th>32</th></td<>	32
	33-006-032
	ELDMENT
Indext (Indext)     Indext (Indext)       FERTED TO SOLIDWORKS     FREVISIONS       THICKNESS TYPO ON 33-013     MODEL NUMBER ON CASTE       MODEL NUMBER ON CASTE     MODEL NUMBER ON CASTE       MODEL NUMBER ON 2014 TC     025-032       MODEL FROM 99-025-014 TC     025-032       MODEL NUMBER ON CASTE     MODEL NUMBER ON CASTE       MODEL NUMBER ON CASTE     025-032       MODEL NUMBER ON CASTE     025-032       MODEL SOLIDWORKS     MODEL/HL       MODEL NUMBER     03/       36106     03/       33622     LOCK /       1105     BOLT, HL       33622     LOCK /       33622     LOCK /       16-132-022     PU-5/       33-514-034     MELD/F       PART NUMBER     MELD/F       MOMERS     MODER       MARINGONS ARE INNERES     MELD/F       MARINGONS ARE INNERES     MELD/F       MARCINAS ARE INNER     MELD/F       MARCINAS ARE INNERS     MELD/F       MARCINAS ARE INNERS     MELD/F       MARCINAS ARE INNERS     MELD/F	S MACHINE NOTSCALE DRAWIN
REVISIONS       DESCRIPTION       CONVERTED TO SOLIDWORKS       CONVERTED TO SOLIDWORKS       CORRECTED THICKNESS TYPO ON 33-013-003       CHANGED MODEL NUMBER ON CASTERS       CHANGED MODEL NUMBER       CHANGED MODEL NUMBER       Distribution       Distribution	рамии вся персек поекто версовствия со. ми итосттне икпли рактов каза иносе итосттне икпли ракиезон ог версивите версивите
	4 ,4 ,4
	÷-

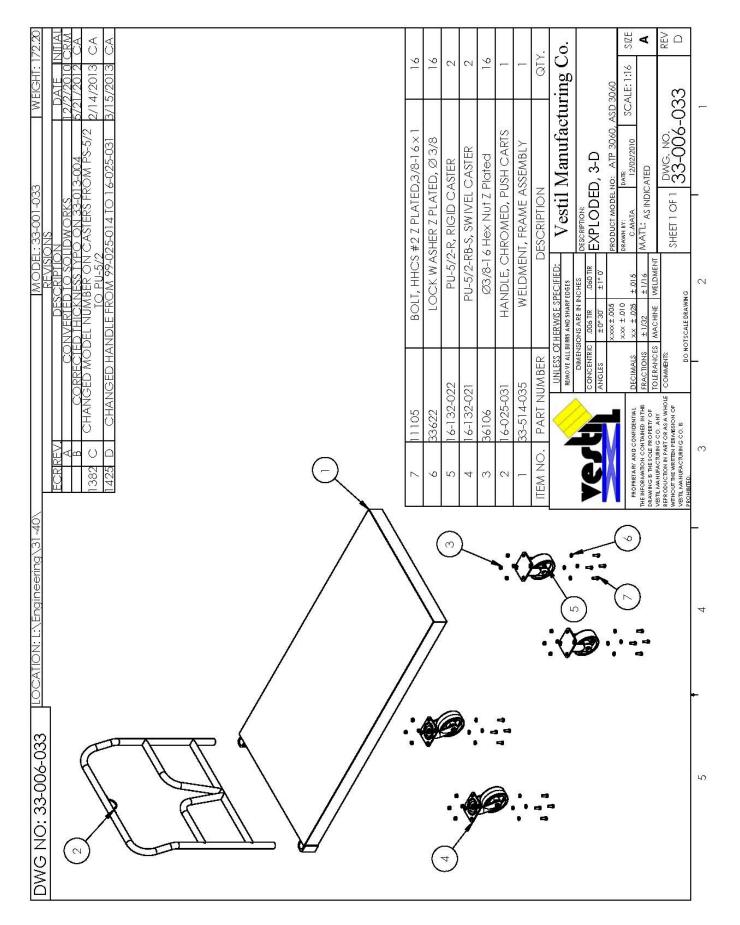

WEIGHT: 148:36 INITIAL CA CA CA CA	ed         16           B-16×1         16           Ø 3/8         16           Ø 3/8         16           ER         2           STER         2           STER         2           CARTS         1           MBLY         1           MBLY         1           ATP 3048, ASD 3048         ATP	1
IMODEL: 33-001-034       REVISIONS     DATE       DN     DATE       DN     T/10/2011       PO ON 33-013-005     5/21/2012       PO ON 33-013-005     5/21/2013       PU-5/D     2/14/2013       PU-5/D     3/18/2013	<ul> <li>/8-1 6 Hex Nut Z Plat HCS # 2 Z PLATED,3/ W ASHER Z PLATED, -1-5/2-R, RIGID CAST</li> <li>/1-5/2-RS, SWIVEL CA</li> <li>(2-RB-S, SWIVEL CA</li> <li>(3-STALODED)</li> <li>(3-STALODED)</li> <li>(3-STALODED)</li> <li>(3-STALODED)</li> <li>(3-STALODED)</li> <li>(4-STALODED)</li> <li>(4-STALCATE</li> <li>(4-STALCATE)</li> <li>(4-STALCAT</li></ul>	-
0 REV DESCRIPTION A CONVERTED TO SOLIDW ORKS B CORRECTED THICKNESS TYPO ON 33-013-005 C CHANGED MODEL NUMBER ON CASTERS C CHANGED HANDLE FROM 99-025-014 TO 16- 025-031 025-031	36106 33622 33622 16-132-022 16-132-022 16-132-021 16-132-026 16-132-021 16-132-021 16-132-025 16-132-021 16-132-025 16-122-025 16-122-02	- ო
OCATION: L:\Engineering\31-40		4
DWG NO: 33-006-034		Ω

WEIGHT: 154.15 INITIAL CA CA CA CA CA	16 16 16 16 2 2 2 2 2 2 2 2 2 2 2 2 2
01-035 DATE 1/10/2011 5/21/2012 2/14/2013 3/18/2013	#2 Z PLATED,3/8-16×1 16 HER Z PLATED, Ø3/8 16 Hex Nut Z Plated 16 -R, RIGID CASTER 2 -R, RIGID CASTER 2 -R, SWIVEL CASTER 2 -R, RIGID CASTER
IMODEL: 33-001 REVISIONS CORRECTED THICKNESS TYPO ON 33-013-006 CHANGED MODEL NUMBER ON CASITERS FROM PS-5/2 TO PU-5/2 CHANGED HANDLE FROM 99-025-014 TO 16- 025-029	BOLT, HHCS #2       LOCK WASHE       LOCK WASHE       Ø3/8-16 H       PU-5/2-R5-S       PU-5/2-R6-S       HANDLE, CHRC       WELDMENT,       WELDMENT,       MANDHERS       DSS       Jac 30       Locating       Jac 30
DESCRIPTIC DESCRIPTIC CONVERTED TO SO CIED THICKNESS TY IGED MODEL NUMI FROM PS-5/2 TO 025-029	
	7         11105           6         33622           5         36106           4         16-132-0           3         16-132-0           2         16-132-0           3         16-132-0           1         33-514-0           1         33-514-0           1         1           1         33-514-0           1         1
DCATION: L:\Engineering\31-40 ECR RE 1382 C 1425 D	
DWG NO: 33-006-035	

WEIGHT: 135.10		INITIAL	CA	CA	CA	CA	5													16	16	71	2 c	7	2	1	QTY.	turing Co.	0		ASD-2448	SCALE: 1:14 SIZE	Ĩ	-036 D	
: 33-001-036		DATE	7/25/2011	5/21/2012	2/14/2013	3/18/2013	0-01-0												HANDI F. CHROMFD. PUSH CARTS	BOLT, HHCS #2 Z PLATED.3/8-16×1	03/8-1 6 Hex Nut 7 Plated	I OOK WANNED 7 DI ATEN 23/8			PU-5/2-RB-S, SWIVEL CASIER	WELDMENT, FRAME ASSEMBLY	DESCRIPTION	Vestil Manufacturing Co.	TION:	EXPLODED, 3-D	MODEL NO: ATP-2448,	WN BY: DATE: C.M.ATA 01/12/2011 LT'I .	AS INIDCATED	SHEET 1 OF 1 33-006-036	-
MODEL: 33-(	REVISIONS	NOI	OLIDWORKS	YPO ON 33-013-007	ABER ON CASTERS	A 99-025-014 TO 16-	4												HANDI F. CHROM	BOLT, HHCS #22	03/8-1 6 Hex				PU-5/2-KB-S, S	WELDMENT, FR	DESCE	UNLESS OT HERWISE SPECIFIED: V	N INCHES	.060 TIR ±1° 0'	2	XXX ± .010 DRAWN BY: XX ± .025 ± .015 C.MA + 1/22 + 1/1 2 M.AT'I •	MACHINE WELDMENT	SCALE DRAWING	7
		DESCRIPTION	CONVERTED TO SOLIDWORKS	CORRECTED THICKNESS TYPO ON 33-013-007	CHANGED MODEL NUMBER ON CASTERS	CHANGED HANDLE FROM 99-025-014 TO 16-	-029-020												1 4-025-029	11105	36106	00788		770-701-01	6-132-021	33-514-038	O. PARI NUMBER	INTESS OF		CONCENTRIC .006 TIR ANGLES ±0° 30'	M	PROPRETARY AND CONFIDENTIAL DECIMALS THE NEORMATION CONTAINED IN THE FEA CTICALS	IDLE PROPERTY OF TOLE RANCES	REPRODUCTION IN PART OR AS A WHOLE COMMENTS: WITHOUT THE WRITTEN PREMISSION OF VESTLIANUFACTURING CO. IS DO NOT	
-40\		REV.	A			D CH/										C	Z		2	· •	5		t c	) (	2	-	ITEM NO.					PROPRIETA RV THE INFORMATIO	DRAWING IS THE VESTIL MANUFAC	REPRODUCTION I WITHOUT THE WR VESTIL MANUFAC PROHIMTED	
Engineering/31-		ECR			1382	1425	2										/	Χ	/	$\backslash$				(	(e)				•	- 	2	, L	•)		1.1.1.1.1.1
CATION: L:\End														/	/	/	/		/		$\left. \right\rangle$	)		• )	/	-		$\langle \rangle$				9  9   9	-		4
<u>4-036 LO</u>		T	H	1	$\exists$	7			$\overline{\mathbf{A}}$	)			لم	/					//		Ŷ	E		•.	• -										•
NVG NO: 33-006-036		/	P		Н	D A		R			7	<b>_</b>	•			$\checkmark$				)	•	- (	<b>(</b>		3	/	•••	a 3 d 3							5
DMG															/	6	)																		

# Label Placement Diagram





## LIMITED WARRANTY

Vestil Manufacturing Corporation ("Vestil") warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

### Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

#### What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

#### What is a "proper request"?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

<u>Mail</u>	<u>Fax</u>	<u>Email</u>
Vestil Manufacturing Corporation	(260) 665-1339	sales@vestil.com
2999 North Wayne Street, PO Box 507	Phone	
Angola, IN 46703	(260) 665-7586	

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

#### What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions ("wearing parts"): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

#### How long is the warranty period?

The warranty period for original components is 90 days. The warranty period begins on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. Vestil may extend the warranty period for products shipped from authorized distributors by up to 30 days to account for shipping time.

## If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any covered part. An authorized representative of Vestil will contact you to discuss your claim.

#### What is not covered by the warranty?

1. Labor:

2. Freight:

3. Occurrence of any of the following, which automatically voids the warranty:

- Product misuse;
- Negligent operation or repair;
- Corrosion or use in corrosive environments;
- Inadequate or improper maintenance;
- Damage sustained during shipping;
- Collisions or other incidental contacts causing damage to the product;

Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

#### Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

