

TO ADJUST CABINET DOORS

With Single Demountable Hinge

Loosen door clamp screw 1/2 turn
ONLY to adjust door up or down, right
or left.

RETIGHTEN SECURELY

To remove door, loosen clamp screw 2
turns. **TIGHTEN SECURELY WHEN
REPLACING.**

