NSTRUCTION MANUAL: A LAPCON SERIES PRODUCT

SOFT DOWN STAY

TYPE SDS-100 & SDS-C100

PAT. P (Japan & many other countries)

HOW TO INSTALL AND LOCATION OF MOUNTING PLATES



Please follow these instructions carefully for proper use.

• HOW TO INSTALL

nstall the mounting plate and arm fixing late with the enclosed wood screws at he designated places.

Insert the "key" of the cam of arm-tip into the key hole of the fixing plate. The main body must be placed at 90 degrees angle against the fixing plate.



3 Then fix the main body with bind screw attached Side board 6

② Turn the main body 90 degrees and insert the knurly axis of the mounting plate to the hole of the main body.



as shown below (A), turn the opening angle adjustment screw (Z) so that the arm can stretch in a straight line as shown (B).



THE DIMENSION OF THE FLAP



900 800 700 HEIGHT (H) (mm) 600 400 300 300		THE DIMENSION OF THE FLAP SOFT DOWN STAY must be used taking the size of the flap into consideration. The graph indicates the usable range when using one SDS stay. When using two stays, the width of flap can be twice as large if the height remains
		unchanged. (Note) The graph shown to the left is in case of a usual wooden flap of 20mm thick (specific gravity approx 0.5)
	100 200 300 400 500 600 700 800 900	 In case of lighter or heavier flap doors that do not fit within the above presided range places context our color atoff

FLAP WIDTH (L) (mm)

MATERIAL AND FINISH

Material: Plastic and steel Finish: Nickel plated (steel)

Ì

Flap

REMARKS

To avoid serious damage and/or injury, do not attempt to disassemble the body of SDS stay.
 Please contact our sales staff when you use LAPCON series products under extreme high

THE DIMENSION OF THE FLAP

and or low temperature
Dimension and specification can be changed with or without notice.

SUGATSUNE KOGYO CO .LTD.

1-8-11, HIGASHIKANDA, CHIYODAKU, TOKYO, 101-8633, JAPAN :81 3-3866-2260 PHONE TELEX :J28289 LAMP FAX :813-3866-4447

SUGATSUNE AMERICA INC. 221 EAST SELANDIA LANE, CARSON, CALIFORNIA, 90746, U.S.A. :(213)32g-6373 PHONE TOLL FREE :(1-800)562-LAMP FAX :(213)329-0819

case drop hinge (SDH-001) used, they are from the flap edge. A B C Butt Hinge (one axis) 100mm 135mm 218mm Drop Hinge (SDH-001) 107mm 142mm 225mm a catching device is recommende For right side board

Ø

4 up

dowr

• PLATE POSITION FOR INSTALLATION Depending on the type of the hinges used, the position of the mount-

ing plate and arm fixing plate should be fixed as indicated below. Each distance for A/B/C is measured from center of butt hinge. In

> When other type hinges are used, please contact our sales staff. To use SDS- 100 (without catch type),

LAMP®

The installation direction of the mounting plate (Type SDS-100 follows the inscription of "DS".)

For right side fixing, the arrow of "R" on the DS side should point upward vertically. For left side fixing, the arrow of "L" on the DS side should point upward vertically.

• ADJUSTMENT

desired, turn the speed adjustment screw (Y) clock-wise. If the door is in the position



the above specified range please contact our sales staff.