

TANDEMBOX waste/recycle set with SERVO-DRIVE


Application



Description

- Pre-assembled bottom mount solution
- TANDEMBOX heavy duty full extension drawer system
- For 15", 18" and 21" wide cabinets with 12", 15" and 18" minimum opening widths
- For face frame and panel applications
- Three-dimensional drawer front adjustment
- Maximum 6 (1/4") cabinet bottom recess
- TANDEM smooth running action
- 175 lb static, 150 lb dynamic load rating
- SERVO-DRIVE touch-to-open feature

Basic components

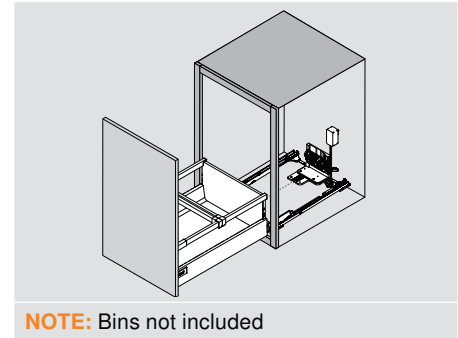


NOTE: Bins not included

Components

TANDEMBOX waste/recycle set

SERVO-DRIVE
inside

BLUMOTION
inside

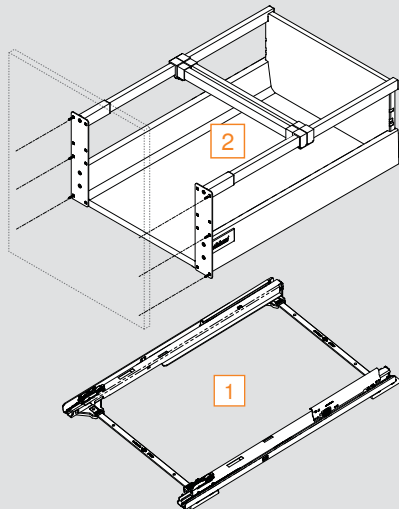


Set includes:

- 1 TANDEMBOX heavy duty runner set with pre-mounted #6 x 1" wood screws for installation (qty 8)
- 2 Pre-assembled silk white TANDEMBOX drawer
 - Installation template and instructions
 - #6 x 5/8" wood screws for attachment to drawer front (qty 10)
 - TANDEMBOX cover caps (qty 2)

TANDEMBOX waste/recycle set	Drawer length	Part no.
For 12" min. opening width	550 (21-5/8")	356M55B7SAB
For 15" min. opening width	550 (21-5/8")	356M55B7SAD
For 18" min. opening width	550 (21-5/8")	356M55B7SAF

SERVO-DRIVE waste/recycle set

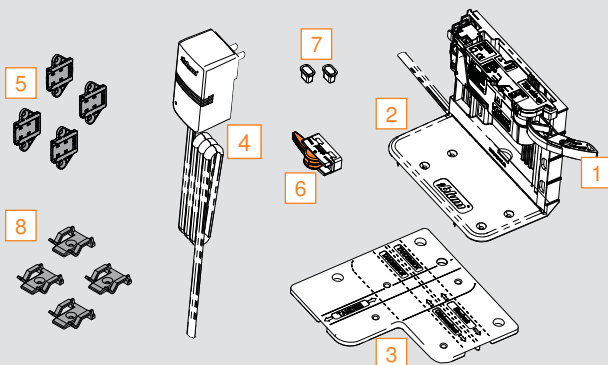

Set includes:

- 1 Drive unit (pre-attached)
- 2 Double bottom bracket with #6 x 1" wood screws (qty 2)
- 3 Adapter plate
- 4 110V plug-in power supply with six feet of universal cable
- 5 Screw-on distance bumpers (qty 4) with #6 x 5/8" wood screws for installation (qty 8)
- 6 INSERTA cable connector
- 7 Cable end protectors (qty 2)
- 8 Cable clips (qty 4)
- Installation template, instructions and user manual

SERVO-DRIVE waste/recycle set	Part no.
SERVO-DRIVE waste/recycle set	Z10NA20UGUS


NOTE: Power supply will operate up to two drive units in a double bottom bracket application (second drive unit sold separately)

Specifications


SERVO-DRIVE
inside

BLUMOTION
inside

Drawer and cabinet specifications

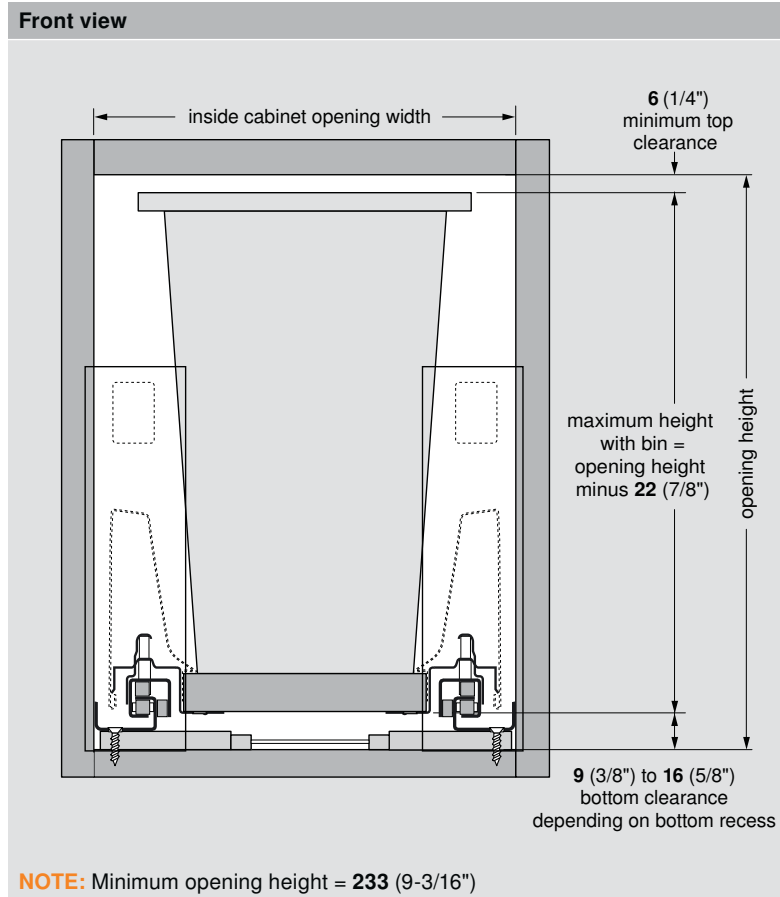

Drawer front attachment

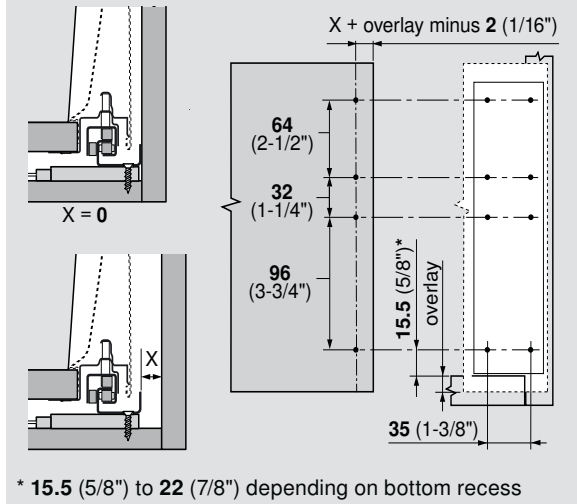

i Important

Bin width and height must be considered when designing your cabinet (see diagram to the left).

Minimum inside cabinet depth

With SERVO-DRIVE	574 (22-5/8")
Without SERVO-DRIVE	569 (22-3/8")

Drawer adjustment and removal

