


Global Knee™


Warnings and Instructions: Review carefully, proper application is required

⚠ Warning: This device will not prevent or eliminate risk of injury. Do Not Overtighten. If swelling, pain, skin irritation, or an unusual reaction occurs, discontinue use immediately and consult your medical professional.


Care: Hand wash using mild soap. Rinse thoroughly. Air dry only. Do not tumble dry.

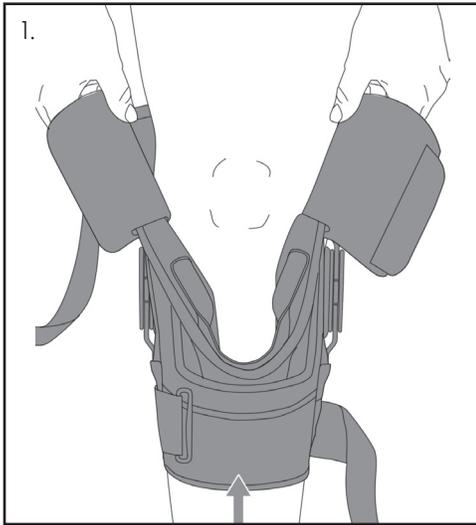


1. Loosen all straps including the inside flap, and slide brace on leg. Apply optional gel buttress to inside of buttress flap only if recommended by your health care practitioner. See buttress application instructions included with buttress.

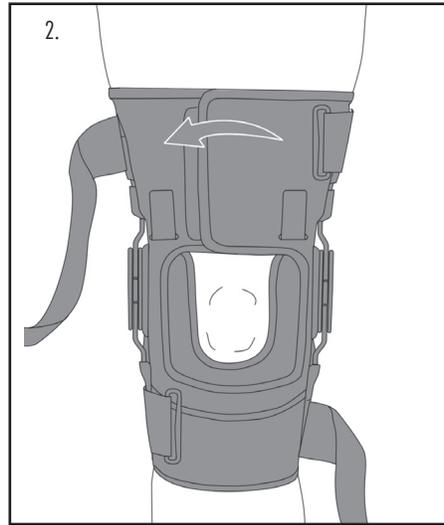


2. With leg fully extended center brace on knee. Pull and fasten upper flap. Inside buttress flap should be located just below the patella.

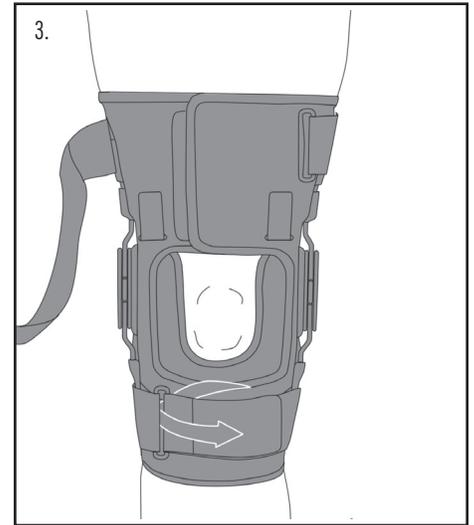


3. Pull lower strap through loop lock and fasten.

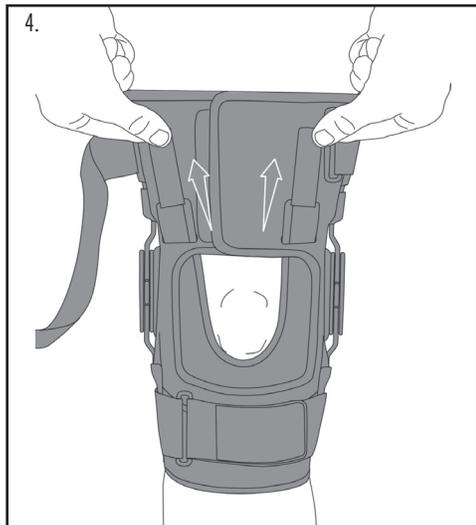

4. Pull and fasten inside buttress flap tabs as needed or instructed by your care provider.

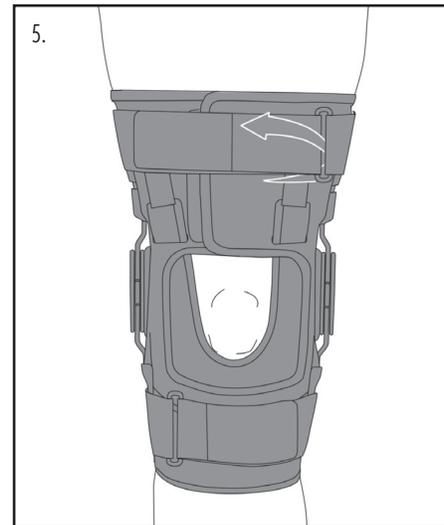

5. Pull upper strap through loop lock and fasten.

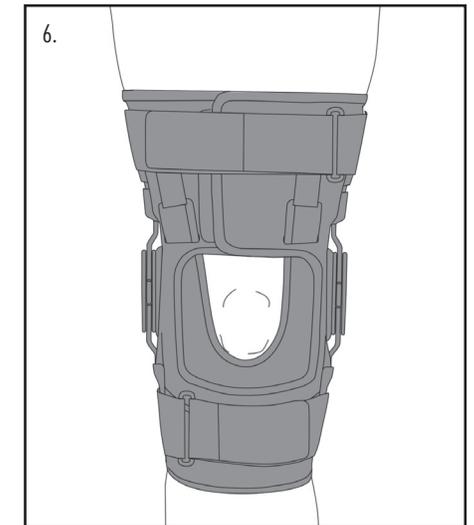

6. Completed application.

See Instructions on How to Adjust the Hinges Range of Motion on Back



Scan for video


HELY & WEBER
 © 2015 Weber Orthopedics Inc.
 DBA Hely & Weber all rights reserved

1185 E Main St., Santa Paula, California 93060
 California: 800-221-5465, National: 800-654-3241
 International: 805-525-4244, fax: 805-933-2348
 U.S. fax: 800-559-5975, www.hely-weber.com


CE
EC REP
 MDSS GmbH, Schiffgraben 41
 30175 Hannover, Germany

Rev D 9/29


Range of Motion Hinge Stop Application

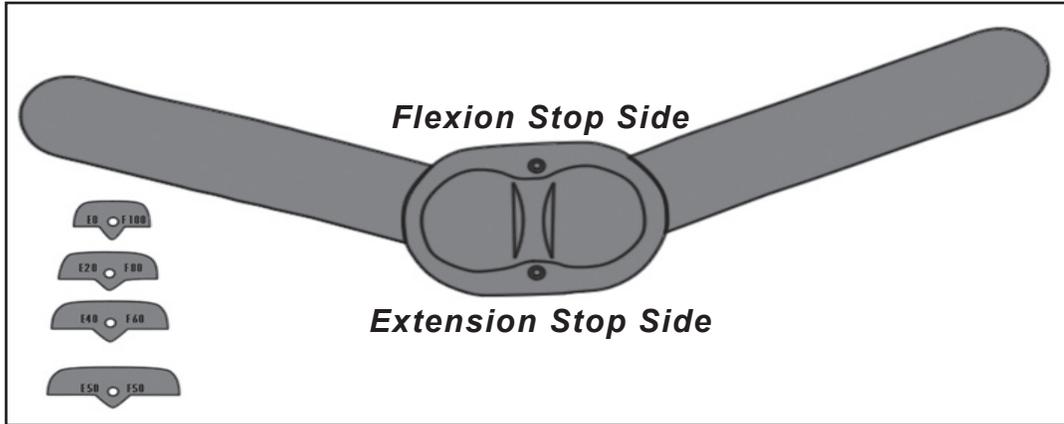


Extension stops are available in 10 degree increments from 0 to 50 degrees.
Flexion stops are available in 10 degree increments from 50 to 100 degrees.
Each stop has two numbers on the front for the degree of flexion (F) or the degree of extension (E) based on which side of the hinge the stop is used.

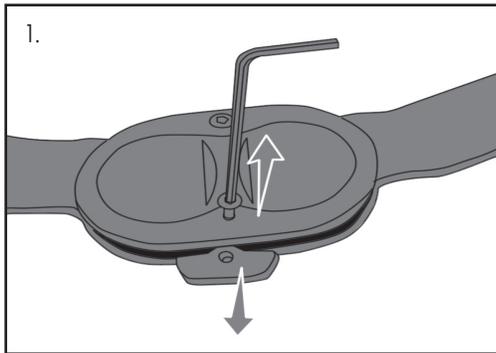


1. Use the included hex wrench to remove the existing hinge stops by removing the screws on both the extension stop side and flexion stop side of the hinge cover.

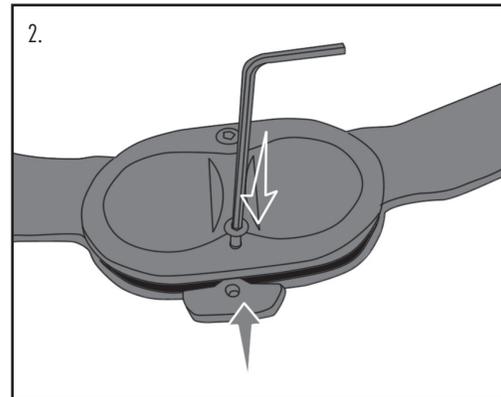

2. Choose the stop with the desired degrees of extension and install it on the extension stop side of the hinge. Be careful not to overtighten the screw and strip the hole.

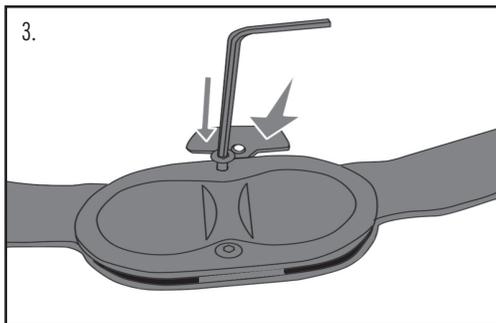

3. Choose the stop with the desired degrees of flexion and install it on the flexion stop side of the hinge. Be careful not to overtighten the screw and strip the hole.

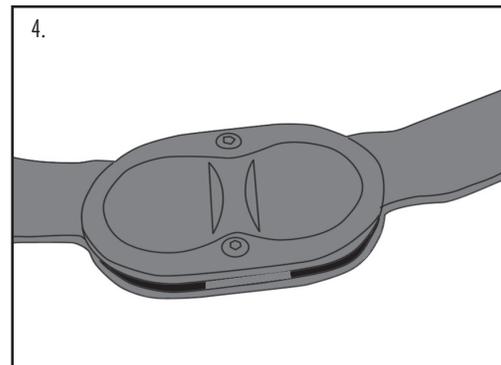

4. Completed application.