 
 


Operating instruction

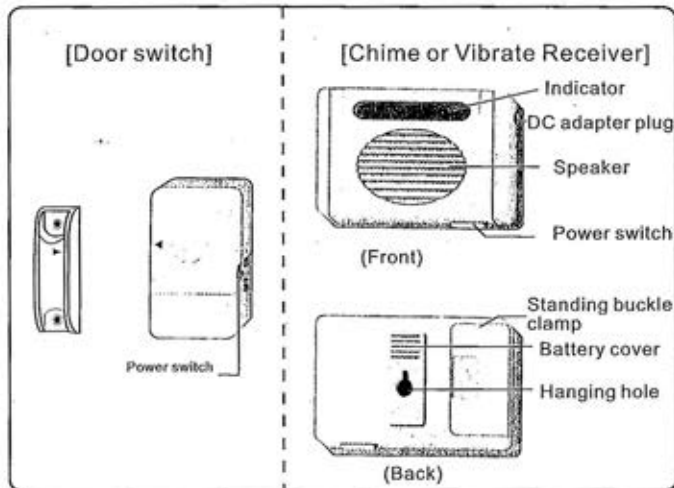


Instruction

1. Correctly install battery on the door switch by according to specification instruction, and then turn on power switch, which is at the side of the door switch.
2. Correctly install battery on the main body of receiver according to specification instruction, and then set power switch to Chime or Vibrate position
3. Confirm if receiver could let out chime when the distance of magnet and door is more than 1 cm.
4. Install magnet on the door by dual-face adhesive tape or screw supplied by the product.
5. As is shown in the picture, put magnet parallel with door switch on the wall or other places.
6. Confirm if receiver let out chime when it is turned on.




•Replace Battery When Low Battery Indicator Lights.

Dry battery installation

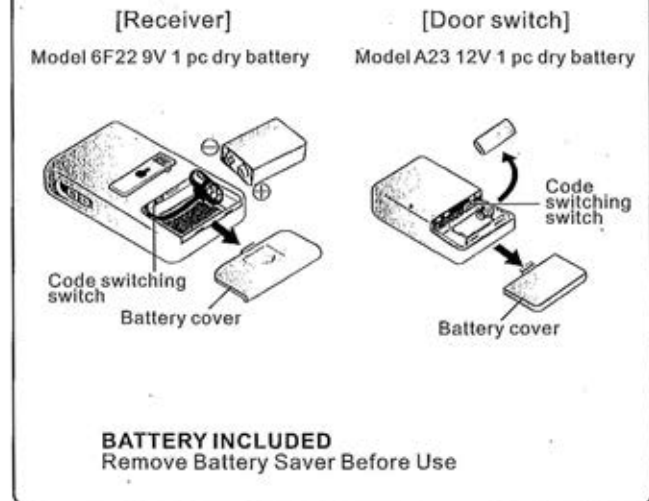

Operating range for door switch

 •See the following picture, receiver will let out buzz when door switch and magnet are in a separated state.

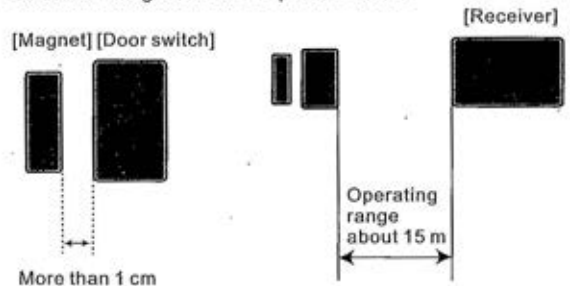

Specification

Battery	Receiver: Model 6F22 9V 1pc dry battery (unsupplied) Door switch: Model 1 A23 12V 1pc dry battery (unsupplied)
Life of battery	Receiver: about 90 days (alkalescency dry battery) Door switch: about 90 days (alkalescency dry battery)
Specification	Receiver: 111(w)*71(H)*34(D) mm Door switch: 35(w)*50(H)*19(D) mm
Volume of receiver	High: about 85 dB Low: about 80 dB

WANDER ALARM

For Doors or Windows

Easy to Install and Use
Sending Unit Can be
Mounted with Screws
or Double Sided Tape

This Product is not for
use in life threatening
or safety situation-

PRODUCT #5959