


DEALER/INSTALLER:

- (1) Provide this Manual to end user.
- (2) Physically demonstrate hitching and unhitching procedures in this Manual to end user.
- (3) Have end user demonstrate that he/she understands procedures.

END USER:

- (1) Read and follow this Manual every time you use hitch.
- (2) Save this Manual and Hitch Warning Hang Tag for future reference.
- (3) Pass on copies of Manual and Hitch Warning Hang Tag to any other user or owner of hitch.
- (4) Never remove hitch warning decals as shown on the cover of this manual. If damaged, contact Reese (1-888-521-0510 or www.reeseprod.com).

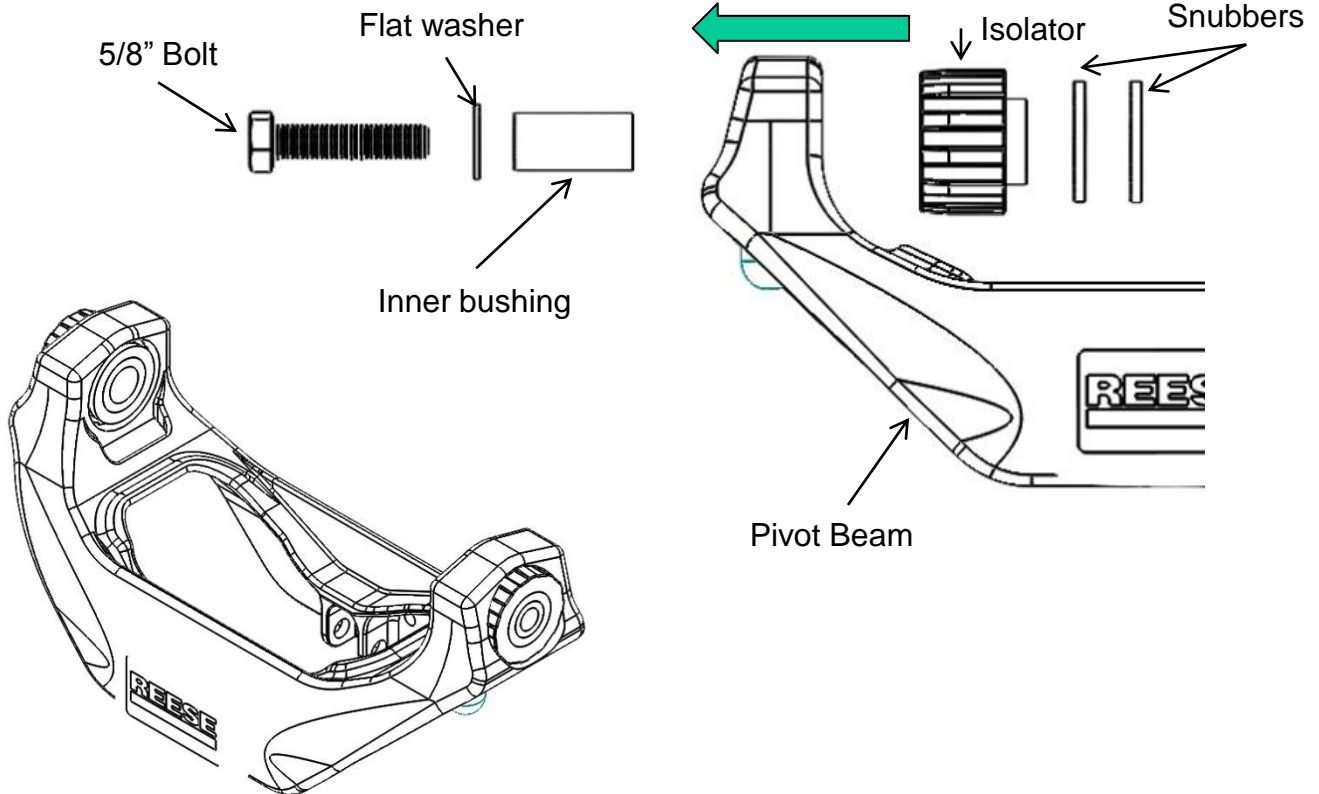

1. Remove head assembly from pivot beam (2 bolts and 2 outer washers) – retain for reinstallation.
2. Push out the old isolators, snubbers and small washers and discard.
3. Apply white lithium grease to the outside edges of the orange isolators
4. Place the isolators in the pivot beam from the center, using a rubber mallet drive the orange isolators into place.
5. The inner edge of the tube that is sticking out of the isolator should be flush with the inside edge of the pivot beam.
6. Place the 2 large snubbers over the tube sticking out of the isolator.
7. Insert the inner bushing into the isolator.
8. Re-assemble the pivot beam to the head pan assembly, torque the 5/8" bolts to 200 ft./lbs.

For Installation Assistance or Technical Help, Call 1-888-521-0510