



## 1 Piece Broken Cap Nut & Wheel Stud Removal Tools

One-Piece tools for the removal of broken/stripped inner cap nuts and spoke wheel studs. When hammered on, self tapping spines cut grooves down the stud for easy removal.



Item Number	Description	Application
<b>2515*</b>	1-1/8" Inner Cap Nut Removal Tool 2-3/4" Long	For removing 13/16" square Head Inner Cap Nuts
<b>2516*</b>	5/8" Wheel Stud Removal Tool	For removing 5/8" Broken Wheel Studs
<b>2517*</b>	3/4" Wheel Stud Removal Tool	For removing 3/4" square Broken Wheel Studs

\* The Teeth of these tools will wear out after limited use, therefore, they are not covered under the GP Warranty.

## Stud Setter for Installing Spoke Wheel Studs

Special tool for installing studs on cast spoke wheels. Used with 1-1/4" hex socket.



Item Number	Description	Application
<b>2617</b>	3/4" Stud Installer	For installing 3/4"-10 Wheel Studs

## 1/2" & 3/4" Drive Stud Setter Impact Sockets

Our special impact sockets for installing wheel studs. Same Function as No. 2617 above, except, there is no need to use a socket to drive the tool. The 3/4" size is also available in 3/4" drive.



Item Number	Drive Size	Description	Application
<b>2619</b>	1/2"	3/4" Stud Setter Impact Socket	For installing 3/4"-10 Wheel Studs
<b>2621</b>	3/4"	3/4" Stud Setter Impact Socket	For installing 3/4"-10 Wheel Studs