Wheel Fastener Service Tools

No. 2412

Inner Cap Nut Removal Kit



This kit removes inner cap nuts on budd wheels when the square head of the nut has broken off. Simply drive the rib nut over the broken cap nut and remove with an impact wrench.

2 piece set contents:

2414.								. Drive-on Tool
2415*								1-1/8" Rib Nut

Inner Cap Nut & Wheel Stud Removal Kit No. 2413



This kit removes inner cap nuts on budd wheels when the square head of the nut has broken off. Also included are rib nuts to remove 5/8" and 3/4" spoke wheel studs. Simply drive the rib nut over the broken cap nut or wheel stud and remove with an impact wrench.

4 piece set contents:

2414.	 			 			Drive	-on	Tool
2415*	 			 		1	-1/8"	Rib	Nut
2416*	 			 			.5/8"	Rib	Nut
2417*	 			 			.3/4"	Rib	Nut

Replacement Parts For Cap Nut & Stud Removal Tools







2415







ltem

Number	Description
2414	Drive-On Tool Only
2415*	1-1/8" (13/16" Sq. Head) Rib Nut
2416*	5/8" Rib Nut
2417*	3/4" Rib Nut
2422	Drive Pin

Application

Tool for Driving on all Rib Nuts For removing broken 13/16" Square Inner Cap Nuts For removing broken 5/8" Wheel Studs For removing broken 3/4" Wheel Studs Removes Cap Nut from Rib Nut



^{*} The teeth of the rib nuts will wear out after limited use, therefore, rib nuts are not covered under the GP Warranty.