

BALANCER TOOLS




TWIN CAM OUTER BALANCER BEARING INSTALLER & REMOVER TOOL

This tool removes and installs the outboard balancer bearing on the 96" and 110" "B" Softail® engines chain guide support plate. *For more details see No.957-IS instructions.*

No.957 - Use on all Softails® 2007-present.

PARTS AVAILABLE SEPARATELY

NO.	QTY.	DESCRIPTION	PART NO.
1	1	OUTER BEARING REMOVER/INSTALLER	961-1
2	1	OUTER SUPPORT	962
3	1	INSTALLER	961-2
4	1	WASHER	2038
5	1	BEARING	2010
6	1	SCREW	1221
7	1	NUT	2136
8	1	INSTRUCTION SHEET	957-IS

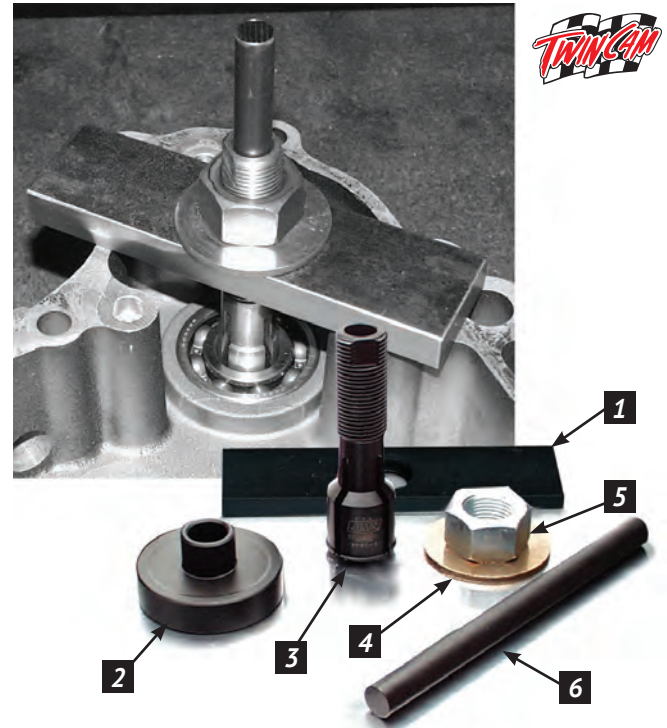

TWIN CAN BALANCER SHAFT BEARING REMOVER & INSTALLER

Performs like JIMS® other bearing removers by simplifying bearing removal. This tool will pull the bearings from the "B" motor case in one easy smooth motion preventing any damage to the bearing bores. The installing portion of this tool is designed to push on the outer diameter of bearings preventing any damage to the bearing or it's bore. Use installer portion of this tool with JIMS® tool No.33416-80. *For more details see No.1167-IS instructions.*

No.1167 - Use on all Twin Cam® 2000-06 "B" model Softails®.

PARTS AVAILABLE SEPARATELY

NO.	QTY.	DESCRIPTION	PART NO.
1	1	R/I BRIDGE	1167-1
2	1	INSTALLATION COLLAR	1167-2
3	1	PULLER	1167-3
4	1	BRASS WASHER	1099
5	1	NUT	1098
6	1	DOWEL PIN	95760-TB-1
7	1	INSTRUCTION SHEET	1167-IS

BALANCER SHAFT RETENTION PINS

Use this tool to secure the engine balancers on Twin Cam "B" engines when servicing the flywheel assembly. This tool locks into the balancer's sprocket pin holes to prevent the balancer from turning out of sync with the flywheel. *For more details see No.1163-IS instructions.*

No.1163 - Use on all Twin Cam® 2000-present "B" model Softails®.



SEE JIMSUSA.COM FOR DETAILED INSTRUCTIONS