


90376 VALVE CORE REMOVER W/VALVE CORES FOR R12



Quickly removes valve cores. Storage area includes six replacement access valve cores.

90377 Replacement standard valve cores for 90376 (6 pcs of 0377-001)

91490 STANDARD VALVE CORE REMOVER/INSTALLER

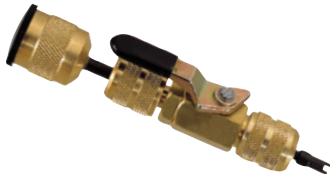

VALVE CORE REMOVERS/INSTALLERS AUTOMOTIVE/HVAC (1/4" FL)

Sturdy ball valve design controls refrigerant flow with 1/4 turn of the valve lever. Lever position also gives visual indication of whether valve is opened or closed.

81490 R134a VALVE CORE REMOVER AND INSTALLER



- For 13 mm and 16 mm high and low service port standard type valve
- Built-in ball valve retains charge and allows access to A/C system
- Excellent for replacing valve cores without discharging the system and for speeding recovery and recharging large systems

81290 R134a UNIVERSAL LARGE BORE REMOVER



Used on R12/R134a Standard and JRA/EATON Large Bore R134a Valve Cores.

91290 UNIVERSAL VALVE CORE REMOVER



Double ended for easy replacement of Standard and GM R12 large bore valve cores.