

PART NO. 99918

WHEEL SPREADER

Instruction Sheet


This tool should only be used by personnel who have the necessary skill, training and tools to do the job correctly and safely. Incorrect use can result in personal injury, vehicle damage and / or loss of vehicle control.

Plan Ahead - Read All Instructions BEFORE using tool.

Check for loose or worn parts, proper tire pressure, and odd tire wear patterns before beginning alignment.

Recommended for use with all toe gauges that check toe without moving the car. Adjust 99918 Wheel Spreader to distance between front tires, then elongate one more hole.

Compress spring and place the Wheel Spreader between tires at front, as near spindle height as possible. Leave Wheel Spreader in this position while checking toe. This puts the wheels in a position similar to a running condition on the road.

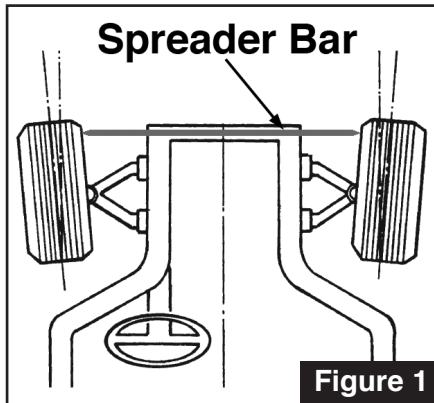

**Specialty
Products
Company**

4045 Specialty Pl • Longmont, CO 80504 • (303) 772-2103
For warranty information go to: www.specprod.com/warranties
www.specprod.com • Email: info@specprod.com Printed in U.S.A.
Toll Free Technical Hot Line: 1-800-525-6505

©2020 Niwot Corp. dba Specialty Products Co. • Form No. 99918INS • Rev. 3/20