


1. **ONLY USE** oil specified by air tool manufacturer.
2. **DO NOT USE** motor, brake, power steering or transmission oil.
3. **DO NOT FILL** with thinner, paints or solvents.
4. Maximum air pressure 175 P.S.I.

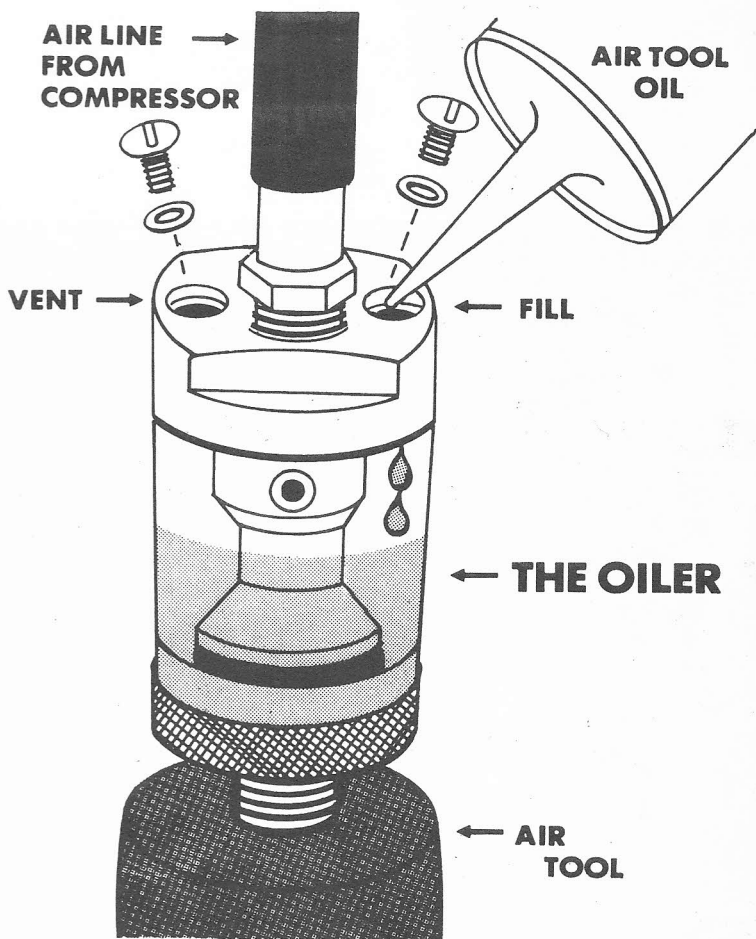

INSTRUCTIONS FOR FILLING

1. Turn off air.
2. Unscrew both small screws near female pipe thread of OILER. Be careful not to lose the washer attached to each screw.
3. Fill with recommended oil through one small hole using the other small hole as an air vent during filling.
4. Replace and tighten both small screws. Be sure that each seats firmly on the washer provided.
5. Turn on air. OILER is now ready for use.
6. A precise metered amount of atomized oil will now enter the air tool regularly with each use. You will not notice any consumption of oil during the first hours of operation.