

BB007

Ultimate Brake Bleeder Removal Tool Kit





PART#	DESCRIPTION	QTY
BBTOOL	BB007 Tool	1
BB01	M10 x 1.0S Brake Bleeder Screw	4
BB02	3/8" – 24 NF Brake Bleeder Screw	4
BB03	5/16" – 24 NF Brake Bleeder Screw	4
BB04	1/4" – 28 NF Brake Bleeder Screw	4
BB05	M10 x 1.25 Brake Bleeder Screw	4
BB06	M10 x 1.5 Brake Bleeder Screw	4
BB07	M7 x 1.0 Brake Bleeder Screw	4
BB08	7/16" – 24 NS Brake Bleeder Screw	4
BB09	M8 x 1.25 Brake Bleeder Screw	4
BB10	M8 x 1.0 Brake Bleeder Screw	4
BB11	7/16" – 20 NF Brake Bleeder Screw	4
BB12	M10 x 1.0 L Brake Bleeder Screw	4
BB20	Small Dust Cap	10
BB21	Large Dust Cap	10
BBPIN	Brake Bleeder Screw Pins	8

All items included in kit and available for individual order.

A Completely New And Better Way To Remove Brake Bleeder Screws

Features a one-piece, compact tool that's perfect for tight spaces.

- Reduce labor time
- Avoid unnecessary and difficult drilling, tapping, or heating
- Decrease the risk of damaging the caliper
- Complete brake jobs faster and avoid delays
- Everything you need in one easy-to-use tool kit
- Pays for itself in as little as one brake job
- Works with both aluminum and cast iron calipers
- Replacement bleeder screws included

How does the BB007 work?

Installing the pin into the bleeder screw prevents the walls from collapsing. Applying shock to the bleeder for approximately three to four seconds causes the bleeder to case-harden and loosens the threads. This makes the bleeder screw easy to remove without damaging the caliper.

Easy To Use

- Insert special-sized pin into the bleeder screw
- Install removal tool into air chisel and shock bleeder from top
- Remove bleeder screw

1.800.390.3996 • phone: 330.745.3300 • fax: 330.745.3488 • www.surrauto.com