




HT-327 HIGH QUALITY 32 WATT LINE TRANSFORMER

INSTALLATION INSTRUCTIONS



HT327

Primary Taps: 8, 16 and 32 Watts
Sec. Impedance: 4 & 8 ohm
Frequency Response: $\pm 1\text{dB}$ from 30Hz to 15,000Hz
Insertion Loss: $< .6\text{dB}$

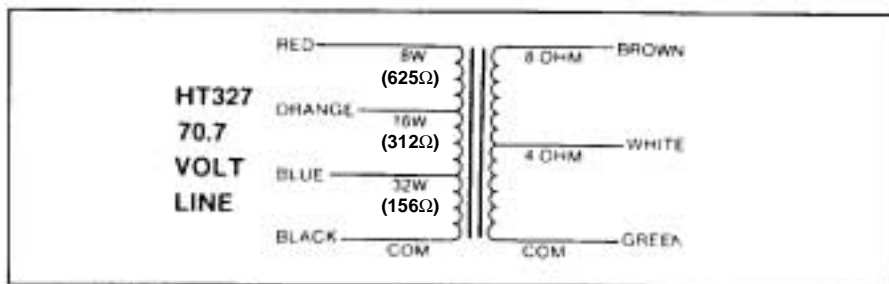

Specifications are subject to change without notice



AtlasSound.com

1601 JACK MCKAY BOULEVARD ENNIS, TEXAS 75119 U.S.A. • TELEPHONE: (800) 876-3332 • FAX: (800) 765-3435
©2002 ATLAS SOUND LP Printed in U.S.A. 00402 ATS001218 Rev A 4/02 PN 115606




HT-327 HIGH QUALITY 32 WATT LINE TRANSFORMER

INSTALLATION INSTRUCTIONS



HT327

Primary Taps: 8, 16 and 32 Watts
Sec. Impedance: 4 & 8 ohm
Frequency Response: $\pm 1\text{dB}$ from 30Hz to 15,000Hz
Insertion Loss: $< .6\text{dB}$

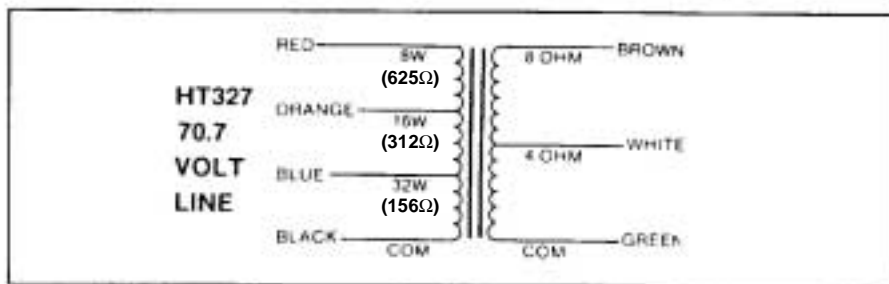

Specifications are subject to change without notice



AtlasSound.com

1601 JACK MCKAY BOULEVARD ENNIS, TEXAS 75119 U.S.A. • TELEPHONE: (800) 876-3332 • FAX: (800) 765-3435
©2002 ATLAS SOUND LP Printed in U.S.A. 00402 ATS001218 Rev A 4/02 PN 115606