

Instruction / Installation Sheet

1 3/4" Hole Saw Plate

Part # 45-0006-WH


- This product is designed for use with low voltage cables ONLY.
- DO NOT run or pull a TV cord or other electrical cords inside the wall.
- It is a violation of the National Electric Code (NEC) to run power cords or extension cords behind the wall.

Tools Needed

Philips Head Screw Driver
1 3/4" Hole Saw

Installation

- First determine the location for the Hole Saw Brush Plate
- Now use a 1 3/4" hole saw to make the cut.
- Run low voltage A/V cables through the opening in the wall and through the Hole Saw Plate.
- Place the Hole Saw Plate into the cutout.
- Secure the plate to the wall by tightening down the screws with wings (do not over-tighten).

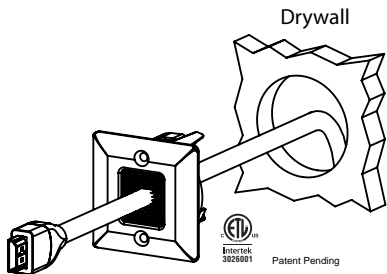

Caution:

- Never install low voltage wiring during lightning storms.
- Never touch un-insulated wires or terminals unless the wire has been disconnected at its network interface.
- Use caution when installing or modifying data or telecommunication lines.
- DO NOT alter, change, or disconnect existing telecommunication wires if you are unsure of their purpose or function.
- It is NOT recommended to install this product in close proximity to an electrical service panel to prevent interference from electrical current.

Important Instructions:

- Read and understand all instructions.
- Do not use this product near water, for example near bath tub, wash bowl, kitchen, sink, or laundry tub, in a wet basement, or near a swimming pool.
- SAVE THESE INSTRUCTIONS.