



FRONT CALLOUTS

1. Manual volume control max setting
2. 3.5 mm line input
3. SD/MMC flash card player slot
4. Mode selection
5. Next track/FM memory station
6. Pause/Play
7. Previous track/FM memory station
8. Repeat one/All tracks
9. Record button for USB drive
10. USB flash drive player slot
11. IR input sensor
12. Microphone
13. LED display

REMOTE CONTROL CALLOUTS

1. On/Off power
2. Mode selection/record button
Short press input mode; Long press records voice when in USB/TF mode
3. Mute
4. Volume up
5. Next track/FM station
6. Pause/Play (FM station memory search)
7. Volume down
8. Select between USB and CD card when both are inserted
9. FM station and track direct entry
10. Repeat one/all
11. Previous track/FM station
12. 6 preset EQ settings (excludes line input)