

DSP Kernel Board

Quick Start Wiring Guide

Model: DSPB-K

1. Run or Program Mode – SW1
2. Reset Switch – SW2
3. Control Port – J3
4. Connection Port (DSPB-KE) – J1
5. Micro USB Power Port – J2
6. Control Port – J4
7. Programming Port – J11
8. POT4: Stereo Gain
9. POT3: Stereo High-pass Adjustment
10. POT2: Sub Low-pass Adjustment
11. POT1: Sub Gain

SW1	MODE	FUNCTION
①	RUN	Audio Output
②	PROG	Programming

