 


FX-AUDIO®  
NFJ&FXAUDIO®

TUBE PREAMPLIFIER

## 胆机前级说明书

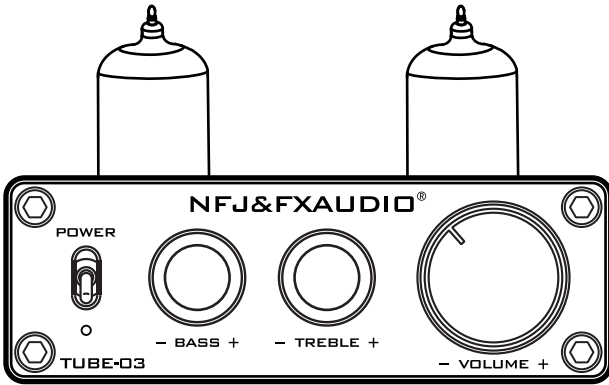

### Model: TUBE-03 OPERATING MANUAL

深圳市飞想数码科技有限公司  
Shenzhen Fly Dream Digital Technology Co., Ltd.



FX-AUDIO®  
NFJ&FXAUDIO®  
飞想®

深圳市飞想数码科技有限公司  
Shenzhen Fly Dream Digital Technology Co., Ltd.

工厂地址：深圳市龙华新区观澜库坑同富裕工业区7号  
诚丰工业园B栋6楼

电话：0755-21015679

邮箱：sales@szfxaudio.com

ADD：6/F, Building B, No 7 Tongfuyu Industrial, Kukeng,  
Guanlan street Longhua Dist. Shenzhen, China

TEL：0755-21015679

E-mail: sales@szfxaudio.com

HTTP: //www.szfxaudio.com www.szfxaudio.cn

## Introduction

### Front Panel

1. Power indicator
2. Toggle Switch
- 3/4. Bass / Treble control
5. Front panel volume control

### Rear Panel

6. RCA Audio input
7. RCA audio output
8. Power DC supply : 12V 1A

 
 
## 功能结构

### 前面板

1. 电源指示灯
2. 拨动电源开关
3. 低音调节旋钮 (BASS)：调节低音
4. 高音调节旋钮 (TREBLE)：调节高音
5. 音量旋钮：顺时针旋转即为音量增加，逆时针旋转即为音量减小


### 后面板

6. 双莲花座输入接口
7. 模拟音频输出接口：用双莲花线输出，可接功放或有源音箱
8. DC 电源接口：12V 1A电源

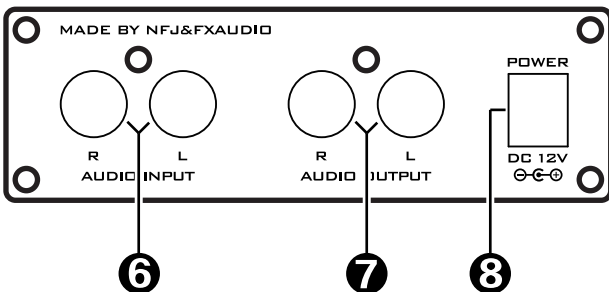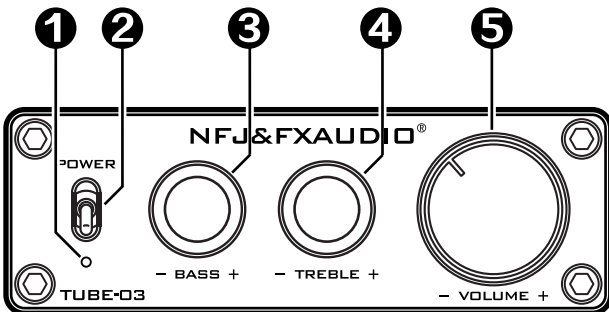

## Wires Connect Instruction

 
Connect to sound source: CD/DVD, PC, Mobile, and set box ect

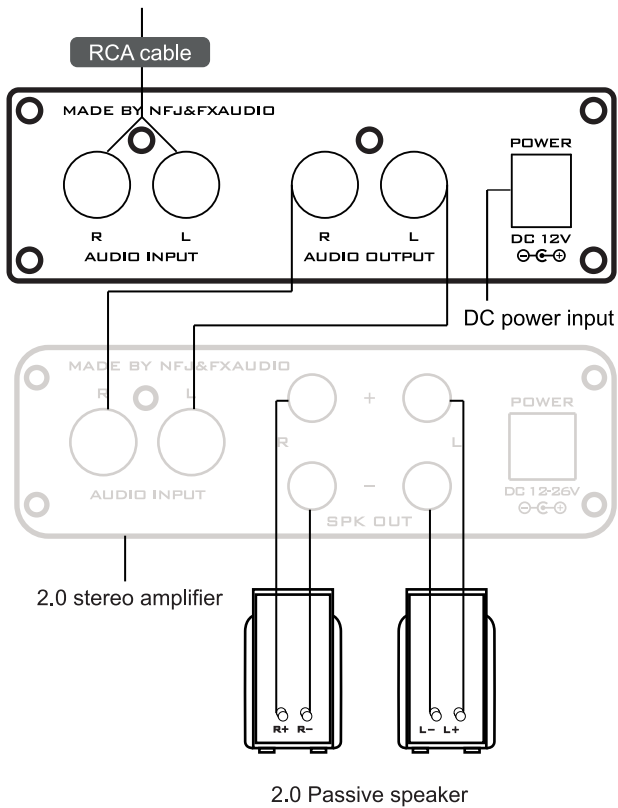

Notice : Since the output BTL is a bridge output, don't connect L- to R- together.

## 接线说明

 接音源：CD/DVD、电脑、手机、机顶盒等

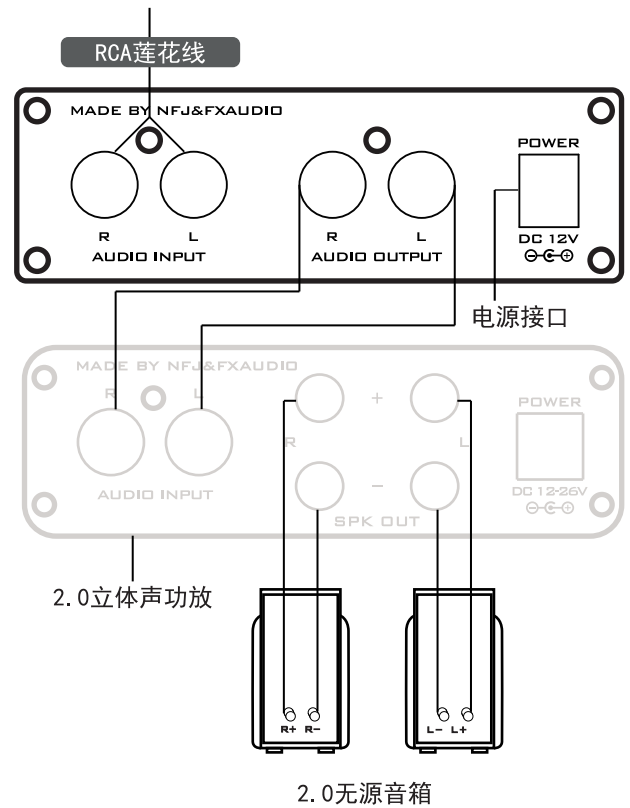

注意：由于输出BTL为桥接输出，音箱的“L-”与“R-”不可连接

## Technical parameters

TUBE 6J1/6K4  
THD: 0.03%  
SNR: 100dB  
Frequency Response:  $\pm 1.5(20\text{Hz}-20\text{kHz})$   
Interface Input: RCA  
Interface Output: RCA  
Operated: Toggle Swieth and Front Panel Volume Control, Bass /Treble control.  
Power Supply DC: 12V 1A  
Color: Black /Silver  
Unit Size: 10 x 9.5 x 3.2cm  
Unit Weight: 0.45kg

## 技术参数

胆管型号：6J1/6K4  
失真：0.03%  
信噪：100dB  
频响： $\pm 1.5(20\text{Hz}-20\text{kHz})$   
输入接口：RCA  
输出接口：RCA  
操作方式：拨动开关，高低音旋钮，和音量调节旋钮  
DC供电：12V 1A  
颜色：黑色 / 银色  
尺寸：10x9.5x3.2cm  
净重：0.45kg

## Warranty Term

The warranty period is 1 year as from the date of invoice. In the precondition of non-artificial damage, product can be repaired for free under conditions within 1 year. The freightage should be paid by both parties. Maintenance service can still be provided after the warranty period, while the freightage should be paid only by customer.

## 保修条款

本公司秉承“用户是上帝”的宗旨，为客户提供满意的售后服务。对于本公司生产之产品，我们承诺提供一年免费保修服务。超过保修期或者人为造成的产品损坏也可提供付费维修服务，本公司将根据维修情况收取适当的费用（运费自负）。未经授权，擅自对产品拆装视为人为损坏。以上条款的修订权、解释权归本公司所有。