



## Programming Instructions

### Setting Up the Programmable Zone Sensor

#### 1

The following procedures show how to set up the programmable zone sensor for operation using the keypad and display. Procedures begin at the home screen.

#### Locking or Unlocking the Keypad

You can lock the keypad to prevent changes, unlock it to make changes as follows

1. Begin at the home screen.
2. Press and simultaneously for four seconds.

The locked symbol appears on the display if the keypad is locked. If you press a keypad button, the locked symbol flashes three times.

#### Locked Symbol:



= Locked

September 2010

© 2010 Trane.  
All rights reserved.

X39641158-01B

#### 5

### Creating a Schedule

The programmable zone sensor has a feature that "copies" the schedule for one of the five week days to the other four week days, and one of the two weekend days to the other weekend day. To use this feature, the sensor must be configured for seven programmable days per week and scheduling must be completely blank. If you set a complete schedule for any one weekday, that schedule will be copied to the other four weekdays. If you set a complete schedule either Saturday or Sunday, the schedule will be copied to the other weekend day. You can modify each day individually, as necessary.

**Note:** To erase all scheduling, select scheduling and press the Test/Configuration button for 2 seconds.

1. To start, perform the following steps to enter setup mode:

- a. Begin at the home screen.
- b. Press twice. The heating/cooling symbols flash.

2. Set the day of the week.

- a. Press twice. The schedule symbols are selected and all other symbols disappear.
- b. Press and to select the days of the week. All days of the week appear and **Mo** (Monday) flashes.
- c. Press and until the day of the week you want to schedule flashes.
- d. Press to select the day and move to the period of the day. All periods appear and the first period (morning) flashes.

#### 2

### Changing the System Setting

To select the system setting, perform these steps:

1. Begin at the home screen.
2. Press twice. The heating/cooling symbols flash.
3. Press and until the desired system symbol flashes.
4. To confirm the setting, press or wait 10 seconds. The home screen will appear.

#### System Symbols:



= System is in the cooling mode.



= System is in the heating mode.



= Emergency heat (HP only). Used by facility operators or service technicians only.

**AUTO**

= System Auto. The system automatically switches between heating and cooling as needed.

**OFF**

= System is Off.

#### 3

### Changing the Fan Setting (CV/HP Configuration only)

To change the fan setting, perform these steps:

1. Begin at the home screen.
2. Press twice. The heating/cooling symbols flash.
3. Press once.
4. Press and until the desired fan symbol flashes.

**Note:** The sensor can be configured for programmable fan operation. If this feature is enabled, fan operation is controlled by the schedule. If you attempt to change the fan setting, the sensor display will change to temporary override setup. See "Temporary Override Setup" to override the fan setting.

5. To confirm the setting, press or wait 10 seconds. The home screen will appear.

#### Fan Symbols:

**AUTO**

= Fan Auto. The fan automatically powers On and Off as needed to reach the selected temperature.

= Fan On. The fan is powered On.

#### 4

### Setting the Time and Day

To set the time and the day of the week, perform these steps:

1. Begin at the home screen.
2. Press twice. The heating/cooling symbols flash.
3. Press three times.
4. Press and to select the hour. The hour flashes.
5. Press or to change the hour.
6. Press to select the minutes. The minutes flash.
7. Press or to change the minutes.
8. Press to select the days of the week. All days of the week appear, and the currently selected day flashes.
9. Press and to change the day.
10. To confirm the settings, press for two seconds or wait 10 seconds. The home screen will appear.

#### Time and Day Display:

Mo

8:30 AM = Day of the week and time clock.

#### Scheduling Symbols:

= Scheduling setting is selected (Step 1).

SC H

Mo Tu We Th Fr Sat Su

= Days of the week is selected (Step 2).

= Periods of the day is selected (Step 3).

--- : ---

= Period start time is selected (Step 4).

= Occupancy setting is selected (Step 5).

= Heating setpoint is selected (Step 6).

= Cooling setpoint is selected (Step 7).

**AUTO**

= Fan Auto. The fan automatically powers On and Off as needed to reach the selected temperature (Step 8).

= Fan On. The fan is powered On (Step 8).

3. Set the period of the day.

- a. Press and to select the period of the day you want to schedule.
- b. Press to select the period and move to the start time. The selected period start time flashes (or dashes flash if nothing has been set).

4. Set the start time.

- a. Press or to change the period start time.
- b. Press to set the start time and move to occupancy. Both occupancy symbols appear and the selected symbol flashes.

5. Set the occupancy. Press and to select the occupancy setting you want for the period you are scheduling.

6. Set the heating setpoint.

- a. Press to select the heating setpoint. The bottom arrow of the setpoint symbol and the heating symbol flash. The active heating setpoint appears (or dashes if nothing has been set).
- b. Press or to change the heating setpoint for the period you are scheduling.

7. Set the cooling setpoint.

- a. Press to select the cooling setpoint. The top arrow of the setpoint symbol and the cooling symbol flash. The active cooling setpoint appears (or dashes if nothing has been set).
- b. Press or to change the cooling setpoint for the period you are scheduling.

8. Select the fan setting.

- a. Press to select the fan setting. The fan setting appears and the currently selected fan setting flashes.

**Note:** CV/HP only, and only if the programmable fan option is enabled.

- b. Press and to select the fan setting for the period you are scheduling.

9. Confirm the schedule settings. Press and hold for 2 seconds, or wait 30 seconds. The home screen will appear.

## Scheduling for VAV Occupied Periods

To schedule for VAV occupied periods, follow the steps below:

1. To start, perform the following steps to enter setup mode:
  - a. Begin at the home screen.
  - b. Press  twice. The heating/cooling symbols flash.
2. Set the day of the week.
  - a. Press  twice. The schedule symbols are selected and all other symbols disappear.
  - b. Press  and  to select the days of the week. All days of the week appear and **Mo** (Monday) flashes.
  - c. Press  and  until the day of the week you want to schedule flashes.
  - d. Press  to select the day and move to the period of the day. All periods appear and the first period (morning) flashes.
3. Set the period of the day.
  - a. Press  and  to select the period of the day you want to schedule.
  - b. Press  to select the period and move to the start time. The selected period start time flashes (or dashes flash if nothing has been set).
4. Set the start time.
  - a. Press  or  to change the period start time.
  - b. Press  to set the start time and move to occupancy. Both occupancy symbols appear and the selected symbol flashes.

5. Set the occupancy. Press  and  to select the occupancy setting you want for the period you are scheduling.
6. Set the warmup setpoint.
  - a. Press  to select the warmup setpoint. The bottom arrow and the active period will flash.

 
**Note:** Only if the heat installed option is enabled.

  - b. Press  or  to change the setpoint.
  - c. Press  to select the supply air heating setpoint.
7. Set the supply air heating setpoint.
  - a. The bottom arrow of the setpoint symbol, the heating symbol, and the fan and arrow outlines all flash.

**Note:** Only if the modulated heat option is enabled.

  - b. Press  or  to change the setpoint.
  - c. Press  to select the supply air cooling setpoint.
8. Set the supply air cooling setpoint.
  - a. The top arrow of the setpoint symbol, the cooling symbol, and the fan and arrow outlines all flash.
  - b. Press  or  to change the setpoint.
9. To confirm the schedule settings, press  and hold for 2 seconds, or wait 30 seconds. The home screen will appear.

### Related Symbols:



= Scheduling setting is selected (Step 1).



Mo Tu We Th Fr Sat Su = Days of the week is selected (Step 2).



= Periods of the day is selected (Step 3).

Morning, Day, Evening, Night



= Period start time is selected (Step 4).



= Occupancy setting is selected (Step 5).



 
= Warmup setpoint is selected (Step 6).



= Supply air heating setpoint is selected (Step 7).



= Supply air cooling setpoint is selected (Step 8).



= The time setting for override setup.

## Temporary Override Setup (CV/HP Only)

To override a setting for a specified period of time, follow the steps below:

1. Begin at the home screen.
2. Press  or . The current temperature setpoint appears.
3. Within 5 seconds of completing step 1, press  to raise the setpoint or  to lower the setpoint. The thermostat enters timed override mode, giving you the opportunity to specify the other parameters of the override.
  - The override symbol flashes and continues flashing throughout the procedure.
  - Either the heating or cooling setpoints symbol flashes.

**Note:** The current zone temperature determines whether the heating or cooling setpoint symbol appears first.
4. Press  or  to move between the heating and cooling setpoint.
5. Press  or  to increase or decrease the heating or cooling setpoint.

6. Press  to override the fan setting (if starting from the heating setpoint, press  twice). Press  or  to change between Auto and On.

**Note:** Only if the programmable fan option is enabled.

7. Press  to specify the amount of time the override lasts. Press  or  to select the number of hours. If your override time is over 23 hours, press  or  to select days. Press  or  to select the number of days.

8. To override occupancy, press  (if starting from days, press twice). The occupancy symbol flashes. Press  or  to change between occupied and unoccupied.

9. To confirm your override settings, press  and hold 2 seconds, or wait 15 seconds. The home screen appears with the override symbol on it.

**Note:** To delete override settings, select temporary override setup and press the Test/Configuration button. The home screen appears without the override symbol.

 
### Related Symbols:



= The heating setpoint symbol flashes when selected.



= The cooling setpoint symbol flashes when selected.



= The override symbol flashes throughout the temporary override setup operation.



= The fan setting flashes when selected.



= The time setting for override setup.

DAYS HOURS



= The occupancy setting symbol flashes when selected.



= The temporary override symbol appears on the display and stays on while an override is present.



Trane optimizes the performance of homes and buildings around the world. A business of Ingersoll Rand, the leader in creating and sustaining safe, comfortable and energy efficient environments, Trane offers a broad portfolio of advanced controls and HVAC systems, comprehensive building services, and parts. For more information, visit [www.Trane.com](http://www.Trane.com).