



Streetwise SafeZone Motion Activated Keypad Alarm

SWSZMAK

This Alarm can either be wall mounted using the bracket supplied or used freestanding for portable use. It is operated using a 4-digit user access code with the keypad on the front of the alarm. The system has 2 operating modes: ALARM and CHIME.

The chime mode is a low security feature that will produce a door-chime sound when the alarm is triggered. This mode can be used in stores to announce customers or in homes to alert caregivers when children or the elderly enter an unsafe area. In the Alarm Mode, the device will produce a constant 120 dB alarm sound when motion is detected.

Mounting:

The alarm is designed to be wall mounted with the mounting bracket (included). The mounting bracket provides the flexibility to aim the motion sensor in a particular direction.

1. Select the desired location for the alarm, such as the corner of a room. This will provide the maximum coverage.

Note: The alarm has a 20 ft. detection zone, with approximate angles of 110 degrees horizontal and 70 degrees vertical. Recommended installation height is 6 - 8 ft.

2. Secure the mounting bracket to the wall using the provided wall anchors or by screwing the mounting bracket directly into a wall stud. Once the mounting bracket is installed securely to the wall, insert the bracket of the mount into the back of the unit and lock in place. The mount will click when secured to the alarm.

Battery Replacement:

The SWSZMAK requires three AAA batteries (not included). The battery compartment is located on the back of the unit.

1. Remove the battery compartment screw and slide off the cover downward (in the direction of the arrow).

2. Insert three AAA batteries (not included) according to the polarity diagram inside the battery compartment.
3. Replace the battery compartment cover and secure the screw.

Note: The motion alarm has a low battery indicator light. When the batteries need to be replaced, the indicator light will flash slowly.

Set Password:

The keypad allows you to set a personal 4-digit password for arming and disarming the alarm.

1. Every time you re-install the battery, you need to reset the password.
2. The indicator LED light on the front of the alarm will blink for 15 seconds. During this time, input your 4-digit password. A beep will confirm each input. If the LED light stops flashing before the password is entered or the alarm does not produce the confirmation beep start the process again.

Operating In Alarm Mode:

1. To activate ALARM mode, the mode selector switch at the side of the unit must first be set to the ALARM position.
2. Enter the 4-digit User Access Password. The alarm will beep as each digit is entered. If entered incorrectly, the unit will sound and the indicator light will flash red three times.
3. A red LED light will immediately begin to flash indicating the 30 seconds exit delay has started. The delay allows time for you to leave the protected area without triggering the alarm.
4. When motion is detected, the red light will flash. The alarm will activate after 10 seconds. The siren will sound for 30 seconds (unless disarmed) and then turn off. After 10 seconds the alarm will check again for motion. If motion is detected, the alarm will sound again. The cycle will repeat until the unit is disarmed.

Disarming the Alarm:

Enter the 4-digit User Access Password. The alarm will beep as each digit is entered. Two beeps will indicate that the User Access Password is correct and the system has disarmed. If an incorrect password is entered, the unit will sound a louder beep. Enter the correct code any time after the alarm has sounded to deactivate.

Operating In Chime Mode:

1. If the unit is in Alarm Mode, enter the password to disarm the alarm.
2. To enter CHIME mode, slide the mode selector switch at the side of the unit to the CHIME position.
3. The chime will sound immediately when motion is detected. **Password is NOT required.** The motion sensor will reset and chime again when motion is detected.
4. To deactivate the chime, slide the ALARM/CHIME switch to ALARM mode.

WARNING:

At close range, the ALARM may cause ear damage. Keep away from children and pets.

Alarms have proven to be an effective deterrent to crime but does not guarantee protection. It is not recommended for outdoor use.

WARRANTY:

Streetwise Security Products extends a ONE YEAR warranty to the SWSZMAK for the product against defects in materials or workmanship, with the following exceptions:

1. The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture, the affixing of any attachment not provided with the product, loss of parts, or recharging the unit in any manner not in accordance with the included instructions.
2. The warranty will be voided if the unit has been used outdoors, opened or tampered with in any way (unless by an authorized dealer) or if any unauthorized replacement parts have been used.

Conditions of sale: Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

To Obtain Service: Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandize Authorization.

The return unit must be sent postage prepaid and proof of purchase is required.

Damage or loss occurring during shipment is not covered by this warranty.