




3-IN-1 BREAKFAST MAKER

INSTRUCTION MANUAL

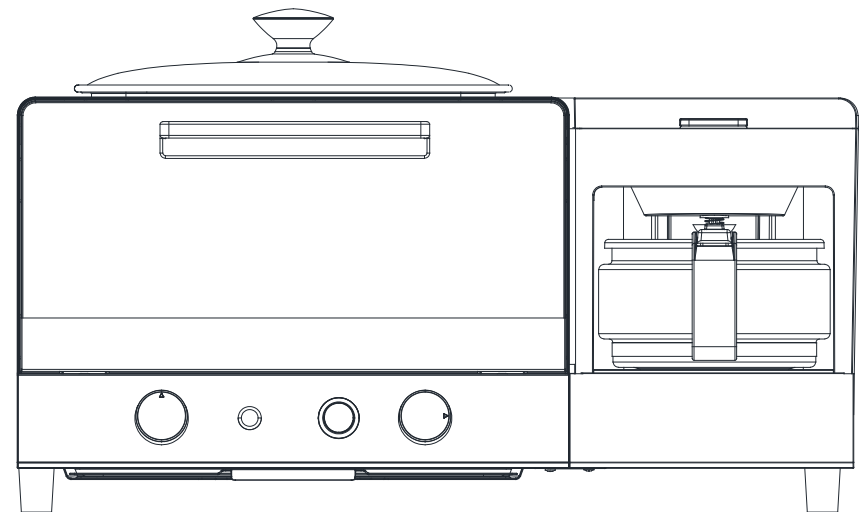

Model: BM-1120B/1120W

IMPORTANT SAFEGUARDS


1. Read all instructions carefully.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs or oven in water.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact the manufacturer.
7. The use of accessory attachments not recommended by the manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Use extreme caution when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then connect cord to wall outlet. To disconnect, turn all controls to OFF position then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Before plugging the appliance into the main supply, make sure the voltage corresponds to that indicated on the nameplate.
15. Place the appliance on a dry, flat surface.
16. Oversized foods or metal utensils must not be inserted in the toaster oven, as they may create fire or the risk of electrical shock.
17. A fire may occur if the toaster oven is in operation while covered or touching flammable material, including curtains, draperies, walls and the like. Do not store any item on top of the appliance when in operation.

18. Do not clean with metal scouring pads. Pieces breaking off the pad and touching electrical parts could present a risk of electrical shock.
19. Exercise extreme caution when using containers constructed of other than metal or glass.
20. Do not store any of the following materials in the oven: paper, cardboard, plastic, etc.
21. A short power cord (or detachable power cord) is provided to reduce the risk of becoming entangled or tripping.
22. This appliance is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
23. If an extension cord is to be used:
 - Ensure the electrical rating of the extension cord meets the requirements of the unit's rating label.
 - The extension cord is grounded
 - Ensure the extension cord is not draped over the counter top or tabletop where it can be pulled on or tripped over.
24. Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
25. To reduce the risk of fire, do not place any heating or cooking appliances beneath the Breakfast Maker.
26. To reduce the risk of fire, do not store anything directly on top of the appliance surface when in operation.
27. Do not immerse the appliance in water or any liquid.
28. Never leave appliance unsupervised when in operation.
29. Use only clean water when filling the water tank.
30. Do not touch the hot plate while the appliance is in operation or immediately after switching off, as it will be very hot.
31. After several uses, clean the filter cone, reusable filter, glass carafe and water tank thoroughly with warm water and non-abrasive detergent.
32. The manufacturer is not responsible for damages caused by improper use or non-observance of this instruction.

SAVE THESE INSTRUCTIONS

PART IDENTIFICATION

3-IN-1 Breakfast Machine: Coffee Maker, Toaster Oven and Frying Pan

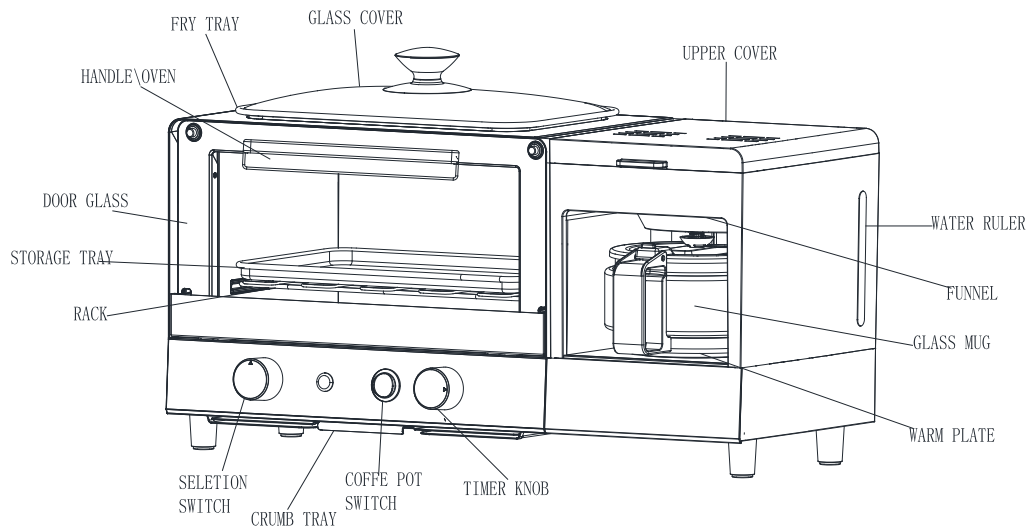

* Crumb Tray – access from bottom of unit.

OPERATING INSTRUCTIONS

COFFEE MAKER

NOTE: Before initial use, clean glass pot, filter cone and reusable filter thoroughly with lukewarm water and mild detergent. Clean water tank by wiping the interior with clean cloth. Fill tank with 1 to 2 cups of clean water. Place pot onto heating place and gently push into place. Turn on the Coffee switch and allow water to cycle through. Discard water.

- Open the water tank lid and fill with drinking water to the required level.
- Gently pull out the filter cone and be sure the reusable filter is properly seated inside the filter cone.
- Add ground coffee or tea into the reusable filter.
- Gently push the filter cone until it locks into place.
- Place coffee pot on the hot plate.
- Switch on the coffee maker switch, the indicator light will illuminate and coffee maker will be in operation

WARNING: The coffee maker does NOT shut off automatically. You must manually turn it off.

Note:

- **To close the filter cone, swing the cone clockwise, lift up a little and gently push inward. This will lock the cone in place. To open, lift up and pull counter-clockwise.**
- **To keep coffee/ tea warm, keep the glass pot on the hot plate.**
- **Scalding may occur if the lid is removed during brewing process.**
- **If ground coffee or tea leaves are to be added during operation, first switch off power and switch back on after adding.**
- **If there is no water in the water tank, switch off power before adding water.**

FUNCTION SELECTOR

OFF – Oven and Frying Pan switched off

UP – to turn on the upper heating element only

DOWN – to turn on the lower heating element only

UP & DOWN – turns on both upper and lower heating elements

FRYING PAN

Before initial use, clean the frying pan with warm soapy water and dry thoroughly. Do not use a scouring pad.

- Turn Selector Dial to UP position and turn Timer Dial to desired cooking time (maximum 60 minutes).
- It is suggested to preheat the frying pan for 2 minutes.

OVEN

- Turn Selector Dial to desired position (UP, DOWN or UP&DOWN) and Timer Dial to desired cooking time (maximum 60 minutes).
- It is suggested to preheat the toaster oven for 2 minutes, especially when using the baking tray.
- In general, It is advisable to begin cooking with the selector in the UP&DOWN position. Then change to upper or lower position if desired, depending on type of food and method.
- When toasting, place food directly on the Baking Rack.
- Keep door closed while oven is in use, to prevent heat loss.
- The oven may be used to defrost frozen food. If possible, freeze food in smaller pieces wrapped in aluminum foil. This will ensure uniform defrosting. Defrost time depends on the size and amount of food.

Note:


- Once the cooking time has elapsed, the unit will emit an audible signal and the oven will stop heating.
- Turning the Timer Dial counter clock-wise to the “0” position or turning the Selector Dial to OFF will interrupt the cooking process.
- Turn both dials to off position when done.

CLEANING

- Turn all switches to OFF position
- Unplug the appliance from main power source
- Remove coffee pot, filter and filter cone – clean with lukewarm water
- Remove baking rack and frying pan – clean with lukewarm water with mild detergent.
- The crumb collecting tray can be removed for cleaning
- Use a damp cloth to clean the outer surfaces
- Use a dry cloth to clean the interior
- Never use abrasive detergents or products that cause scratching
- Take special care not to touch the resistances when cleaning the inside of the oven.

Note: Do not clean immediately after use, as appliance is hot. Wait until the appliance has cooled down before cleaning.

To remove baking rack:

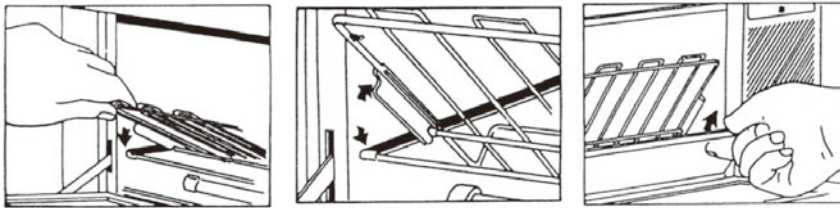

To remove crumb tray (accessed from the bottom):

Remove coffee pot, reusable filter and frying pan. Gently lay unit on its back. Pull down on tab to remove crumb tray.



SPECIFICATIONS

		Model: BM-1120B/1120W
Input voltage		120V 60Hz
Power consumption		1450W
Coffee Maker	Power	650W
	Capacity	4 cups
Toaster Oven	Power	800W
	Capacity	10L
	Timer	15min
Upper Pan	Power	800 W



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Damage due to installation error, product abuse and/or misuse.
- Incidental or consequential damage caused by possible defects with this product.
- Labor cost incurred for the installation and/or removal of a possible defective unit.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.
- Normal wear and tear on parts or replacement of parts designed to be replaced.
- Damage to personal property from use of product.
- Replacement or repair of household fuses, circuit breakers, wiring or plumbing.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
 14625 Clark Ave, City of Industry, CA 91745
 Tel: 626-336-2299 · Fax: 626-330-7116
service@sunpentown.com
www.sunpentown.com