



INSTRUCTION MANUAL
REMOTE CONTROLLED TOWER FAN

MODEL: SF-1521



PLEASE READ BEFORE USE AND SAVE THIS MANUAL

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USE

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

 
- 1、 Use this fan only as described in this manual. Other uses not recommended may cause fire, electrical shock or injury to persons.
- 2、 This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
- 3、 To protect against electrical shock: do not place fan on windowsills, immerse unit, plug or cord in water or spray with any liquids.
- 4、 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to bypass this safety feature by using adapters.
- 5、 Close supervision is necessary when any appliance is used by or near children.
- 6、 Turn the fan OFF and unplug the fan from the outlet when not in use, when moving the fan from one location to another and prior to cleaning.
- 7、 To disconnect the fan, first turn the unit OFF, grip the plug and pull it from the wall outlet. Never remove from the outlet by pulling the cord.
- 8、 Do not operate the fan in the presence of explosive and/or flammable fumes and materials.
- 9、 Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- 10、 Do not operate fan with a damaged cord or plug, or if the product malfunctions, or is dropped and damaged in any manner (see warranty).
- 11、 Avoid contact with moving fan parts.
- 12、 The use of attachments not recommended by the manufacturer may be hazardous.
- 13、 Only use the fan on a dry level surface.
- 14、 Do not hang or mount fan on a wall or ceiling.
- 15、 Do not operate if the fan housing is damaged.
- 16、 A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.

WARNING: To reduce the risk of fire and electrical shock, do not use this fan with any solid-state speed control device.

ASSEMBLY INSTRUCTIONS

Do not use this fan before assembling the base.

Base Assembly

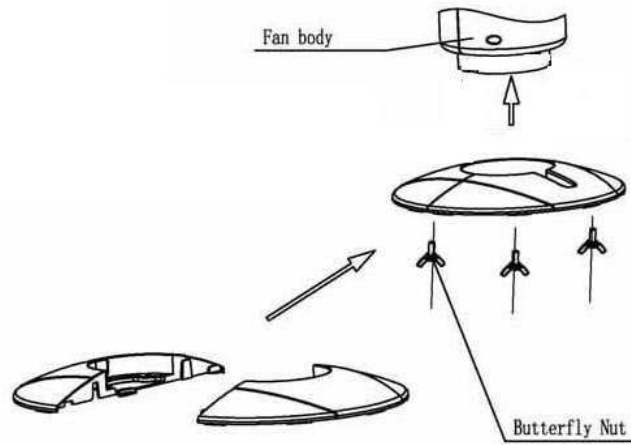

PARTS IDENTIFICATION

Fig.1 Control panel

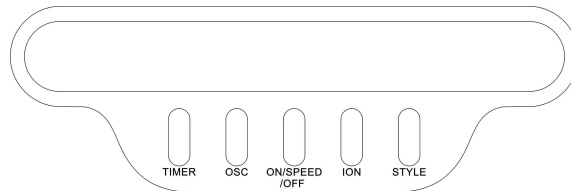 


Fig.2 LCD screen

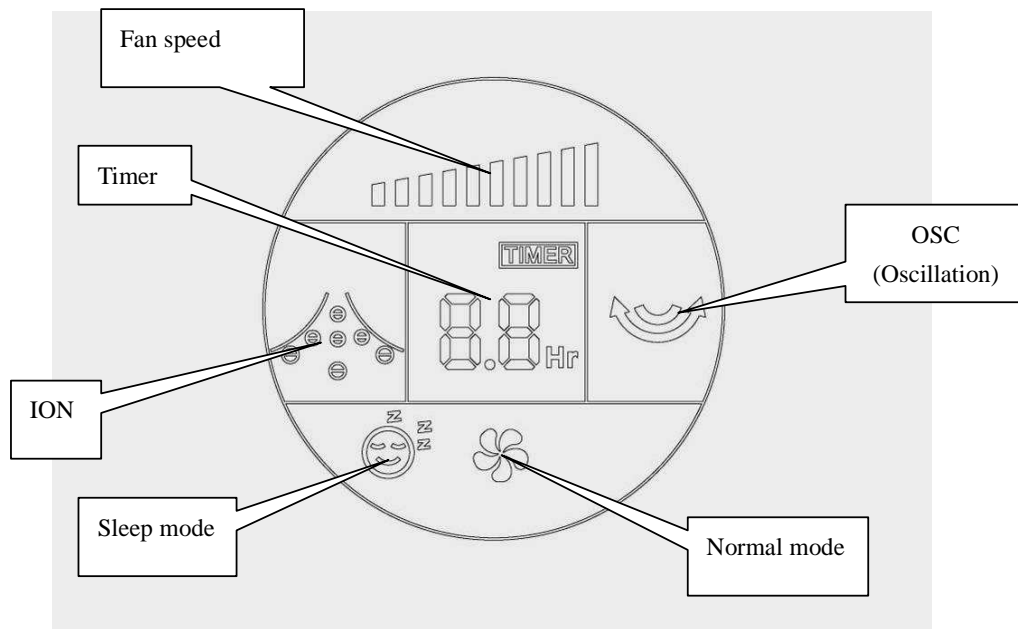 


Fig.3 Remote controller



FAN OPERATION

Plug into any AC 120V, 60Hz source, insure that the plug fits securely into the socket. The unit can be operated through the control panel or remote control.

CONTROL PANEL

 
1) On/Speed/Off button

- Press once to turn on the fan. Unit will start at Low fan speed.
- Press again to set Medium fan speed.
- Press the third time to set High fan speed.
- Press the fourth time will turn the fan off.


2) Mode button: To switch to and from normal mode or sleep mode

- NORMAL: unit operates in selected fan speed, High, Medium or Low.
- SLEEP mode: unit operates according to computerized intervals of changing speeds.
 1. If fan speed is set on High when entering SLEEP mode, unit will operate in the following programs: Program A (30 minutes) → Program B (30 minutes) → Program C (until unit is manually turned off, Timer-off or mode changed to Normal).
 2. If fan speed is set on Medium when entering SLEEP mode, unit will operate in the following programs: Program B (30 minutes) → Program C (until unit is manually turned off, Timer-off or mode changed to Normal).
 3. If fan speed is set on Low when entering SLEEP mode, unit will continuously run in Program C until manually turned off, Timer-off or mode changed to Normal.


Program A

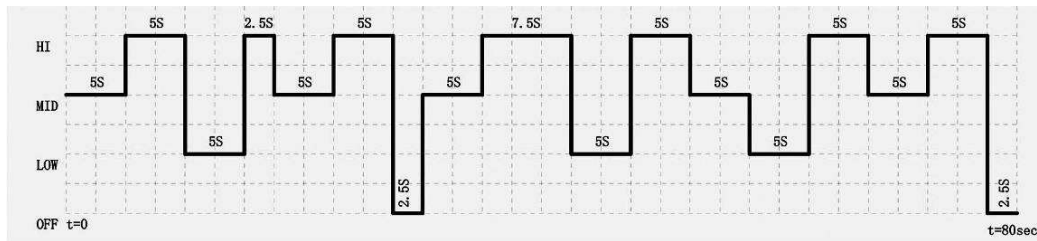

Program B

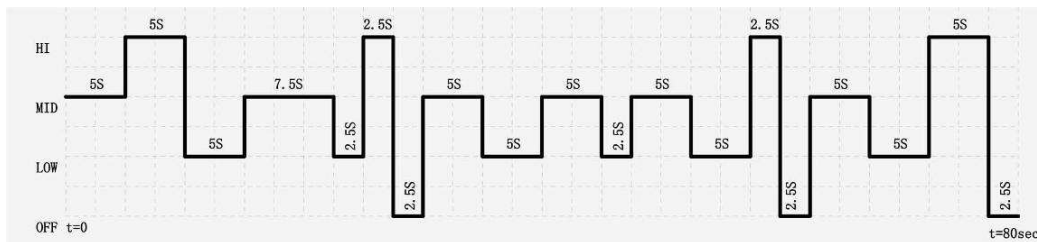 

Program C

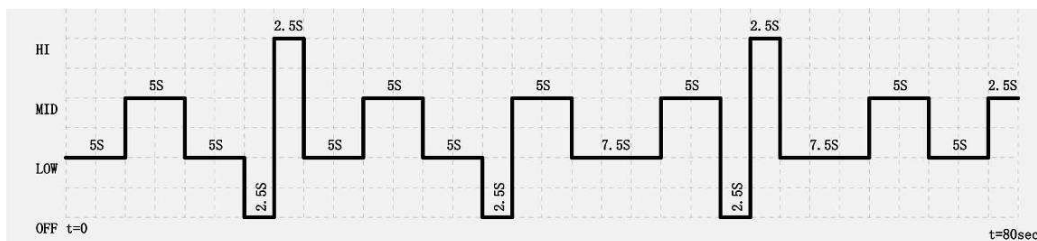 

3) OSC button

- To activate the Oscillation feature, press the **OSC button** once.
- Press **OSC button** again to turn the Oscillation feature off.

4) Timer button

- When the fan is in use, you can set a time for the fan to turn off. Maximum is 8 hours.
- Press the **Timer** button, the LCD screen will display and flash the default time. The default time is 0.0h
- Press the timer button continually to set the timer-off function between 0.5 and 8 hours. Each press is an increment of 0.5 hours.

5) ION button:

- Press once to activate the ION feature.
- Press again to turn feature off.

REMOTE CONTROLLER

1) On/Off button

- Press once to turn fan on, with default at low fan speed.
- Press again to turn the fan off.

2) Speed button:

- To adjust fan speed, press once for medium speed, and twice for high speed.
- Press the third time to return to low fan speed.

Other buttons operates the same as the control panel.

CLEANING AND STORAGE

- Turn off power and unplug the fan before cleaning.
- Use only a soft, damp cloth to gently wipe the outer surfaces.
- To clean between the grilles, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove the dust.
- DO NOT immerse fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled. Cover the fan to protect from dust and store in a cool, dry, place.

WARNING!

If the fan has any problems, please contact Sunpentown Customer Service at 909-468-5288.

DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY

SPECIFICATIONS

Noise level (High)	60 dB
Speed, RPM (High/Medium/Low)	1300 / 1050 / 900 (± 100)
Oscillation	70 degrees ($\pm 5^\circ$)
Power input	120V / 60Hz / 0.4A
Wattage	45 W
Automatic shut-off timer	0.5 ~ 8 hours
Fan speeds	3
Power cord length	5.9 ft
Unit dimension	12" diameter x 33" high
Package dimension (L x W x H)	9.15 x 7.6 x 34.25 in.
Net weight	12 lbs
Gross weight	13 lbs
Safety approval	ETL



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.

21415 Baker Parkway, City of Industry, CA 91789-5236

Tel: 909-468-5288 · Fax: 909-468-5279

service@sunpentown.com

www.sunpentown.com