

ACCUSPLIT® AX605

OPERATING INSTRUCTIONS

Twin Button Feature:

The Left and Right buttons on new ACCUSPLIT stopwatches operate interchangeably, so both are labeled “A” for these instructions.



Event

- A – Start
- A – Stop (“Time Out”)
- A – Restart (“Time In”)
- A – Stop
- C – Reset

BATTERY CHANGING

If the display becomes dim or goes blank, you can replace the battery using “X3V” case battery changing instructions posted at www.accusplit.com/support. The watch uses a five-year CR2032 Lithium battery.

Master Reset

Remove battery as shown above. Wait 5 seconds and reinstall.

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check

<http://support.ACCUSPLIT.com>

ACCUSPLIT, Inc. • 3090 Independence Drive, Suite 148 • Livermore, CA 94551 USA

800-935-1996 • 925-290-1900 • FAX 925-290-1930

www.ACCUSPLIT.com • support@ACCUSPLIT.com