

ULTRA-TOW™

A-FRAME JACK

OWNER'S MANUAL



Top-Wind

Side-Wind



WARNING:

Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

Item# 44065, 44066, 44067, 44068

Thank you very much for choosing an Ultra-Tow product! For future reference, please complete the owner's record below:

Model: _____ Purchase Date: _____

Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it.

This machine is designed for certain applications only. The distributor cannot be responsible for issues arising from modification. We strongly recommend this machine not be modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the machine until you have first contacted the distributor to determine if it can or should be performed on the product.

For technical questions please call **1-800-222-5381**.

INTENDED USE

Each premium A-frame round tube jack delivers the lifting performance essential for safety and dependability. The jacks have a sturdy 2¼" outer tube diameter. Jack foot (sold separately) provides needed ground support. Features a corrosion-resistant exterior-grade black powder-coat finish on the body, with a durable zinc finish handle arm.

Item#	Crank Type	Clearance	Range	Lift Capacity
44065	Top-Wind	11in.	8in.–22in.	2000 lbs.
44066	Side-Wind	16in.	9in.–23.5in.	2000 lbs.
44067	Top-Wind	8.5in.	10.5in.–24.5in.	3000 lbs.
44068	Side-Wind	16in.	9in.–23.5in.	3000 lbs.

GENERAL SAFETY RULES




- Read and understand all instructions. Failure to follow all instructions listed below may result in serious injury.
- Owner must ensure that the jack is installed according to these instructions
- Never position any part of body under this product or supported load.
- Fully retract/rotate jack before towing.
- This jack is not intended for use as a transport device. Minimize movement of the implement while the jack is under load.
- Do not allow children to play on or around this jack while supporting a load.
- Secure the load, vehicle and trailer from rolling when operating jack.
- Never attempt to lift or support loads in excess of the rated strength of this trailer jack.
- This jack is designed for vertical loading. Excessive side forces may cause failure and or injury.
- Before moving trailer crank jack to its lowest position.
- This jack is designed for A-Frame trailers only.
- Do not modify the jack in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the equipment. There are specific applications for which the jack was designed.

- Store idle jack. When jack is not in use, store it in a secure place out of the reach of children. Inspect it for good working condition prior to storage and before re-use.

SAVE THESE INSTRUCTIONS

ASSEMBLY

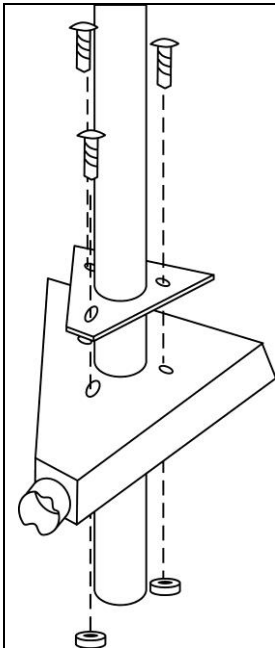

1. When mounting trailer jack, it is best to hook up to the tow vehicle to make sure trailer is secure.
2. Mount jack based on drawing shown at left.
3. Slide A-frame jack through hole on top of A-frame coupler.
4. Line up the three slotted holes on jack mounting plate to the three 3/8" holes in the coupler.
5. With three 3/8" x 1" bolts and nuts (sold separately) secure jack tightly to the top of the a-frame coupler. (Regularly check to ensure bolts/nuts are tightened securely.)
6. After jack is mounted to trailer, attach the handle assembly to jack with bolt fastener provided.

MAINTENANCE

- **Maintain your Jack.** It is recommended that the general condition of any jack be examined before it is used. Keep your jack in good repair by adopting a program of conscientious repair and maintenance. If jack is damaged, discontinue use of the jack.
- This jack is pre-greased for easy operation. This jack includes a grease zerker for easy lubrication as needed.

WARRANTY

3-year limited warranty

ULTRA-TOW[™]

Distributed by
Northern Tool + Equipment Co., Inc.
Burnsville, Minnesota 55306
NorthernTool.com
Made in China