# INSTRUCTIONS & MAINTENANCE



# STACKED SLATE SPILLWAY WALL

Stacked Slate Spillway Wall 32" Item #78244

Stacked Slate Spillway Wall 19" Item #78268

Stacked Slate Wall 26" Riser Item #78272

Stacked Slate Wall 13" Riser Item #78246

aquascapeinc.com

#### Instructions

#### STEP 1

• Set the fountain on an appropriate basin or reservoir (Ex. 1).

#### STEP 2

• Connect the pipe to the water pump (not included) and set the pump in the basin or reservoir (Ex. 2).

## STEP 3

• Fill the basin or reservoir with water (Ex. 3).

### STEP 4

• Plug in the pump and enjoy (Ex. 4).









## **Quick and Easy Fountain Assembly**

The Stacked Slate Spillway Wall comes in two parts for easy transport. Assemble the fountain by setting the top section onto the bottom section.



## **Recommended Products**

#### WATER PUMP

Recommended Pump for the Stacked Slate Spillway Wall 19": Ultra 1100 Water Pump (#91008) or larger

Recommended Pump for the Stacked Slate Spillway Wall 32": Ultra 2000 Water Pump (#91010) or larger

#### SUB-SURFACE RESERVOIR/BASIN

Recommended Basin: AquaBasin® 45 (#78224)

#### EXTEND THE HEIGHT

Recommended Extension: Stacked Slate Wall 13" Riser or 26" Riser.