

Black Mobile TV Cart

Instruction Manual



SKU: STAND-TV04M



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-tv04m







↑ WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.




TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF TV OR TV CART.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

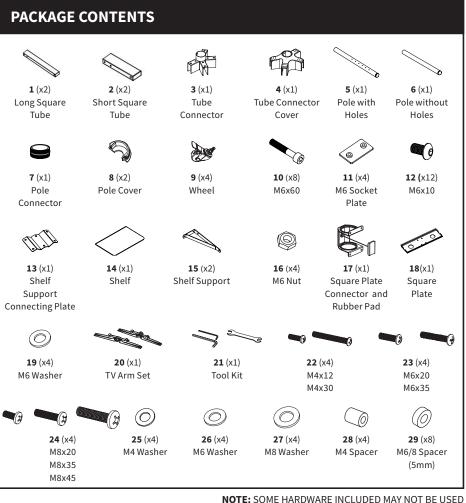


Screwdriver




SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.


ASSEMBLY STEPS


STEP 1

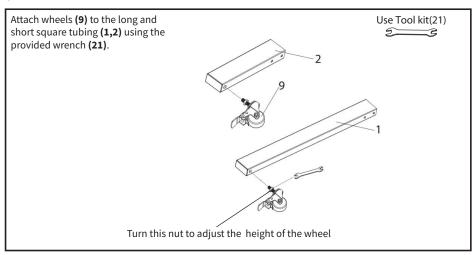

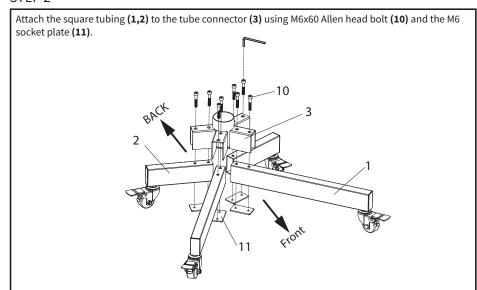


STEP 3

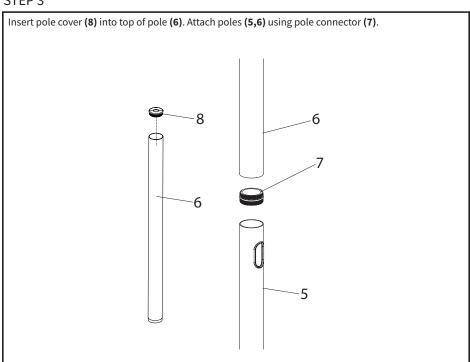


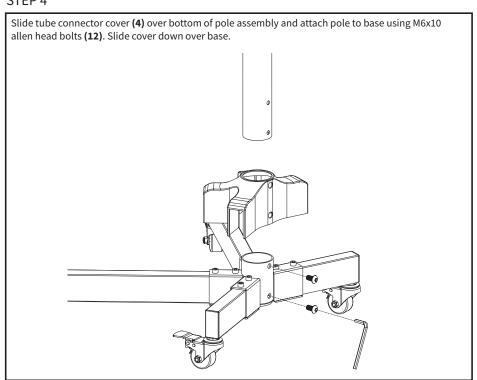


STEP 5

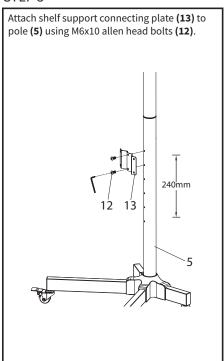



STEP 6

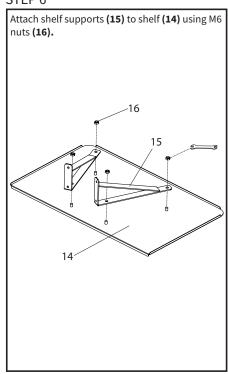


STEP 7

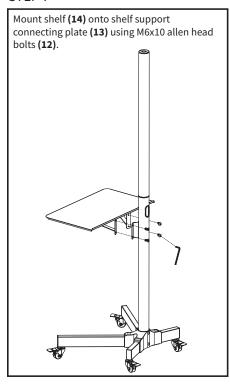


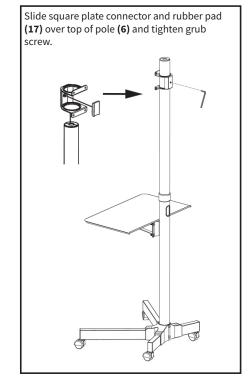


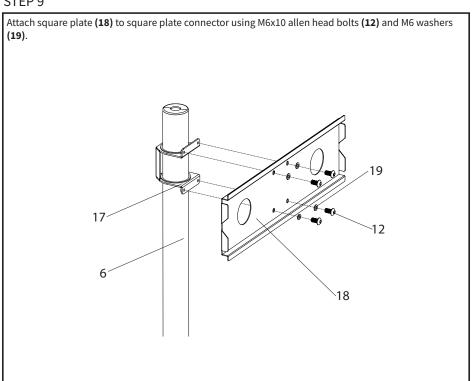


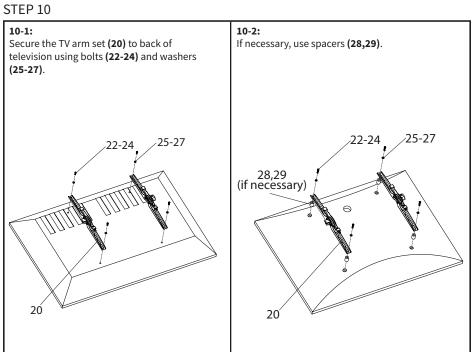

STEP 11 STEP 12

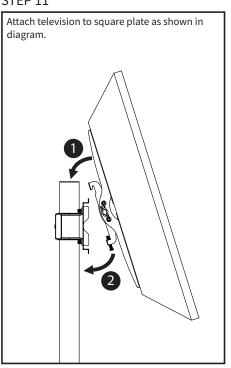

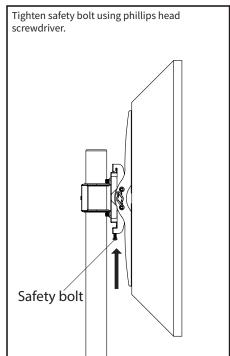

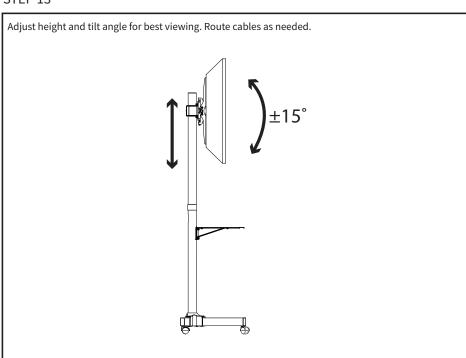



If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.







help@vivo-us.com

www.vivo-us.com

1-800-371-5654

For more VIVO products, check out our website at: www.vivo-us.com.