


FX-AUDIO-[®]
NFJ&FXAUDIO[®]

AUDIO AMPLIFIER

数字功放机说明书

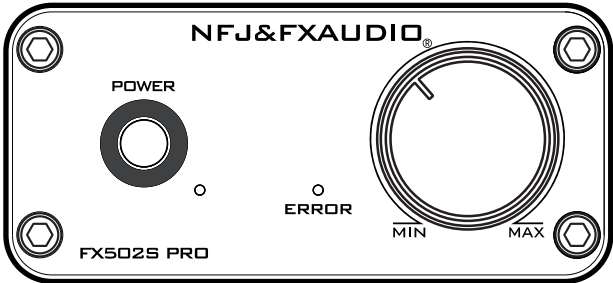

Model: FX502S PRO
OPERATING MANUAL

深圳市飞想数码科技有限公司
Shenzhen Fly Dream Digital Technology Co., Ltd.




FX-AUDIO-[®]
NFJ&FXAUDIO[®]
飞想[®]

深圳市飞想数码科技有限公司
Shenzhen Fly Dream Digital Technology Co., Ltd.

工厂地址：深圳市龙华新区观澜库坑同富裕工业区7号
诚丰工业园B栋6楼
电话：0755-21015679
邮箱：sales@szfxaudio.com

ADD：6/F, Building B, No 7 Tongfuyu Industrial, Kukeng,
Guanlan street Longhua Dist.Shenzhen, China
TEL：0755-21015679
E-mail: sales@szfxaudio.com
HTTP://www.szfxaudio.com www.szfxaudio.cn

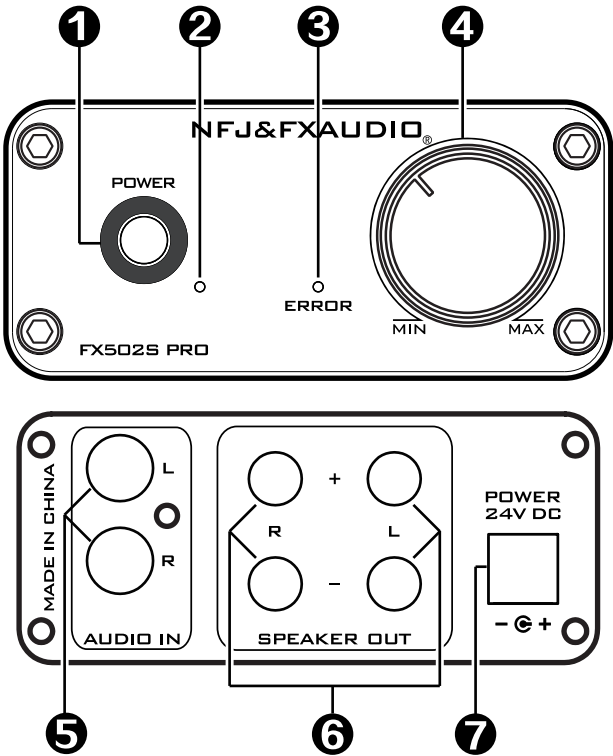

Introduction

Front Panel

- 1.ON/OFF button
- 2.Power indicator
- 3.Error indicator
- 4.Volume Contorl: Clockwise rotation for volume up and counterclockwise rotation for volume down.

Rear Panel

- 5.Analog input: connect to devices with analog output,such as TV,mobile phone,tablet,PC and CD player.
- 6.Audio output: connect to 2.0 passive speaker.Don't connect a negative electrode to another.
- 7.DC power supply: 24V 4A

功能结构

前面板


1. 开/关机按键
2. 电源指示灯
3. 错误指示灯，如果此灯闪烁，请检查机器是否超负载，喇叭接线是否准确，检查完毕请关机重启
4. 音量控制旋钮

后面板

5. 模拟输入，接带模拟接口的设备，如：电视，手机，平板，电脑，播放器等
6. 音频输出接口，接2.0无源音箱（注意负极与负极不可以连接）
7. 电源接口，接24V 4A电源

Wires Connect Instruction

Sound source:
PC/CD player/Mobile phone/Tablet/TV ect

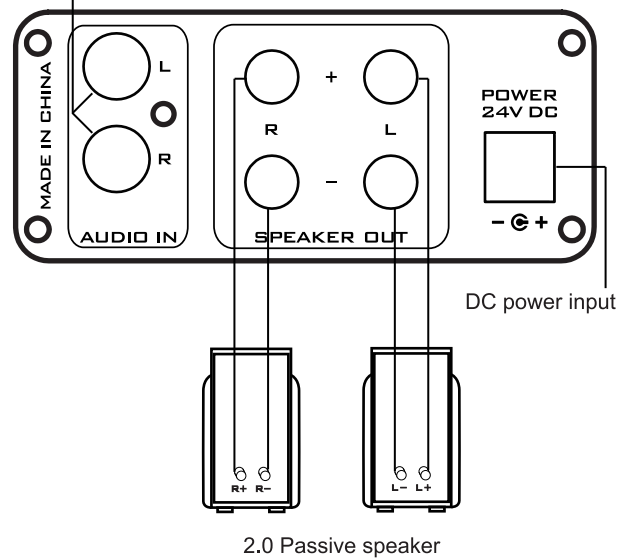


Technical parameters

Chipset: TPA3250+NE5532
Power Output: 80W+80W @ 4Ω,
50W+50W @ 8Ω
THD: 0.02%
SNR: -92dB
Frequency Response: ±3dB(20Hz~20KHz)
Input: RCA
Output: Speaker
Impedence: 4-8Ω
DC power supply: 24V 4A
Unit size: 9.2*15.8*4.5cm
Unit weight: 0.48kg

接线说明

接音源：电脑、播放器、手机、电视等

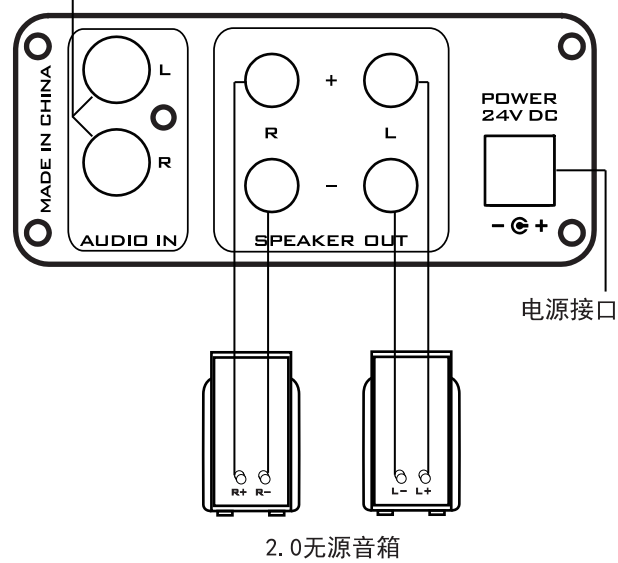

技术参数

芯片组：TPA3250+NE5532
功率：80W+80W@4Ω,
50W+50W@8Ω
THD：0.02%
SNR：-92dB
频响 ±3dB (20Hz~20KHz)
输入接口：RCA
输出接口：镀金音箱接线柱
阻抗：4-8Ω
供电：直流24V 4A
尺寸：9.2*15.8*4.5cm
重量：0.48kg