


Installation Instructions for Quick Change Mop Handle

Item Number: 40340

Handle components

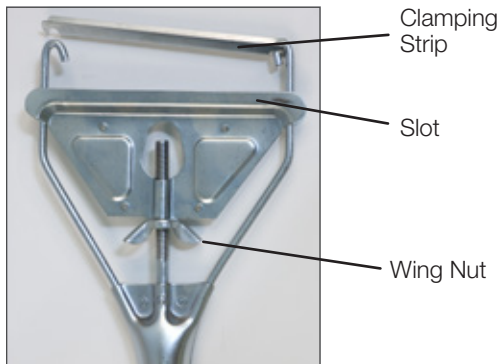


1. Unscrew wing nut counterclockwise until there is enough space to place a mop.



2. Place narrow band mop into the slot under the clamping strip.



3. Ensure clamping strip and slot are parallel in order for mop to be held correctly. Close clamping strip.

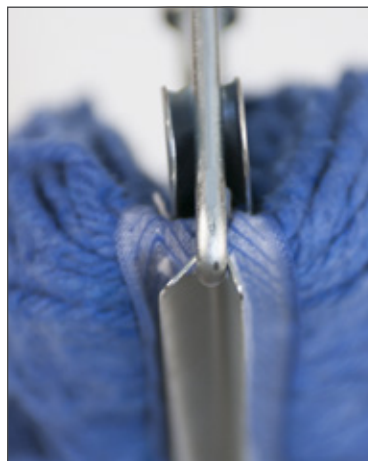

4. Tighten wing nut by turning clockwise while holding the mop in place so that it does not move. Do not over tighten the wing nut.

