

Fig. 4
Setting 1-1/2" screws in predrilled holes


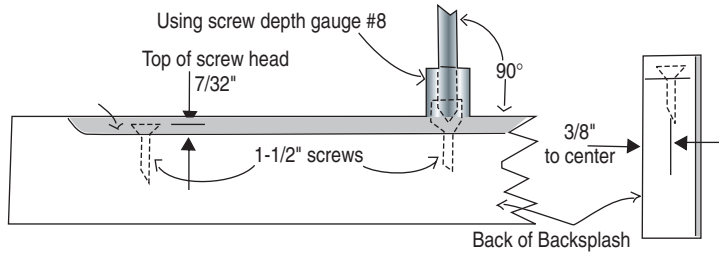


Fig. 5
Securing Smart Clips to counter top

NOTE:
 Secure front of counter only
 Secure back of counter after Backsplash is in place

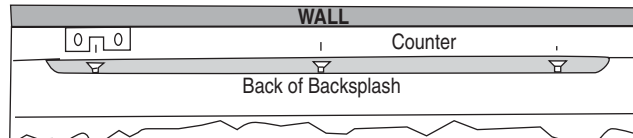

Lay Backsplash down and mark centers of screws on counter.
 Center screw slot of clips on marks and secure clip using 3/4" screws, holding clip tight to wall.



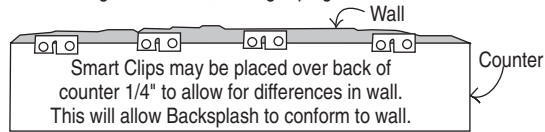


Fig. 6
Securing Backsplash into position

1 After Smart Clips are in place, apply 1/4" caulk bead in front of Smart Clips.

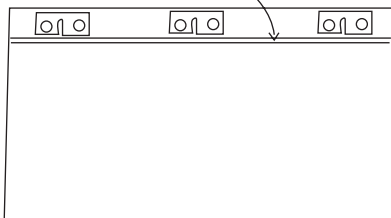

2 After caulk bead is in place, align backsplash in front of Smart Clips. Using a block of wood and hammer, drive in place at clip location. Backsplash is now part of the top and not the wall as when glued. Eliminates mastics, metals, front caulking, ugly cracks and provides a lasting waterproof fit.

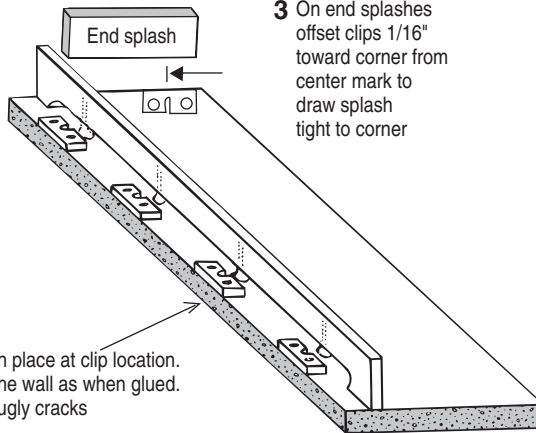

3 On end splashes offset clips 1/16" toward corner from center mark to draw splash tight to corner

Handy Backsplash Holder
 For drilling and applying screws to Backsplash

