



*** WOOD FLOOR INSTALLATION ONLY ***

BSO-2G

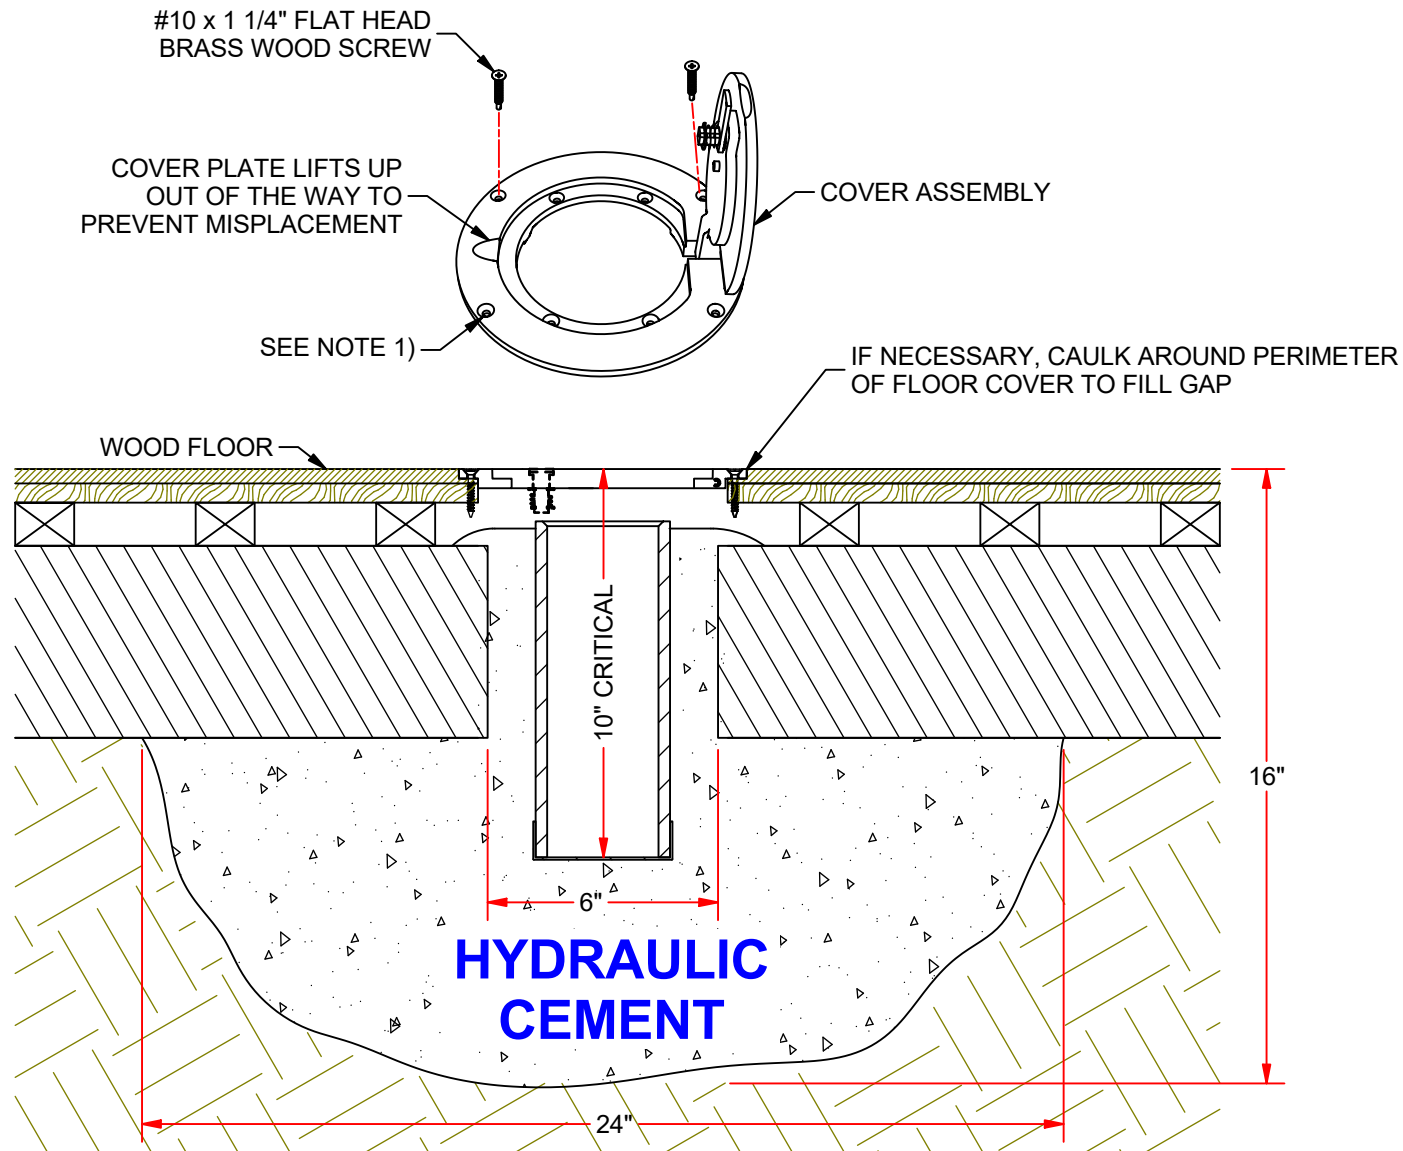


NOTES:

1) THE OUTER HOLES OF THE COVER ARE USED TO PERMANENTLY ANCHOR THE COVER TO THE WOOD FLOOR. THE INNER HOLES ARE NOT UTILIZED.


 <p>976 Hartford Turnpike Waterford, CT 06385 USA (800)243-0533 Fax: (800)988-3363 www.jaypro.com</p>	MODEL NUMBER: BSO-2G	CHECKED BY: WVB
	PRODUCT NAME: INDOOR 2-3/8 ID FLOOR SLEEVE	
DATE: 9/10/2019	REV: -	DRAWN BY: Moune T.
		SHEET: 1 OF 2

***** SYNTHETIC FLOOR INSTALLATION ONLY *****

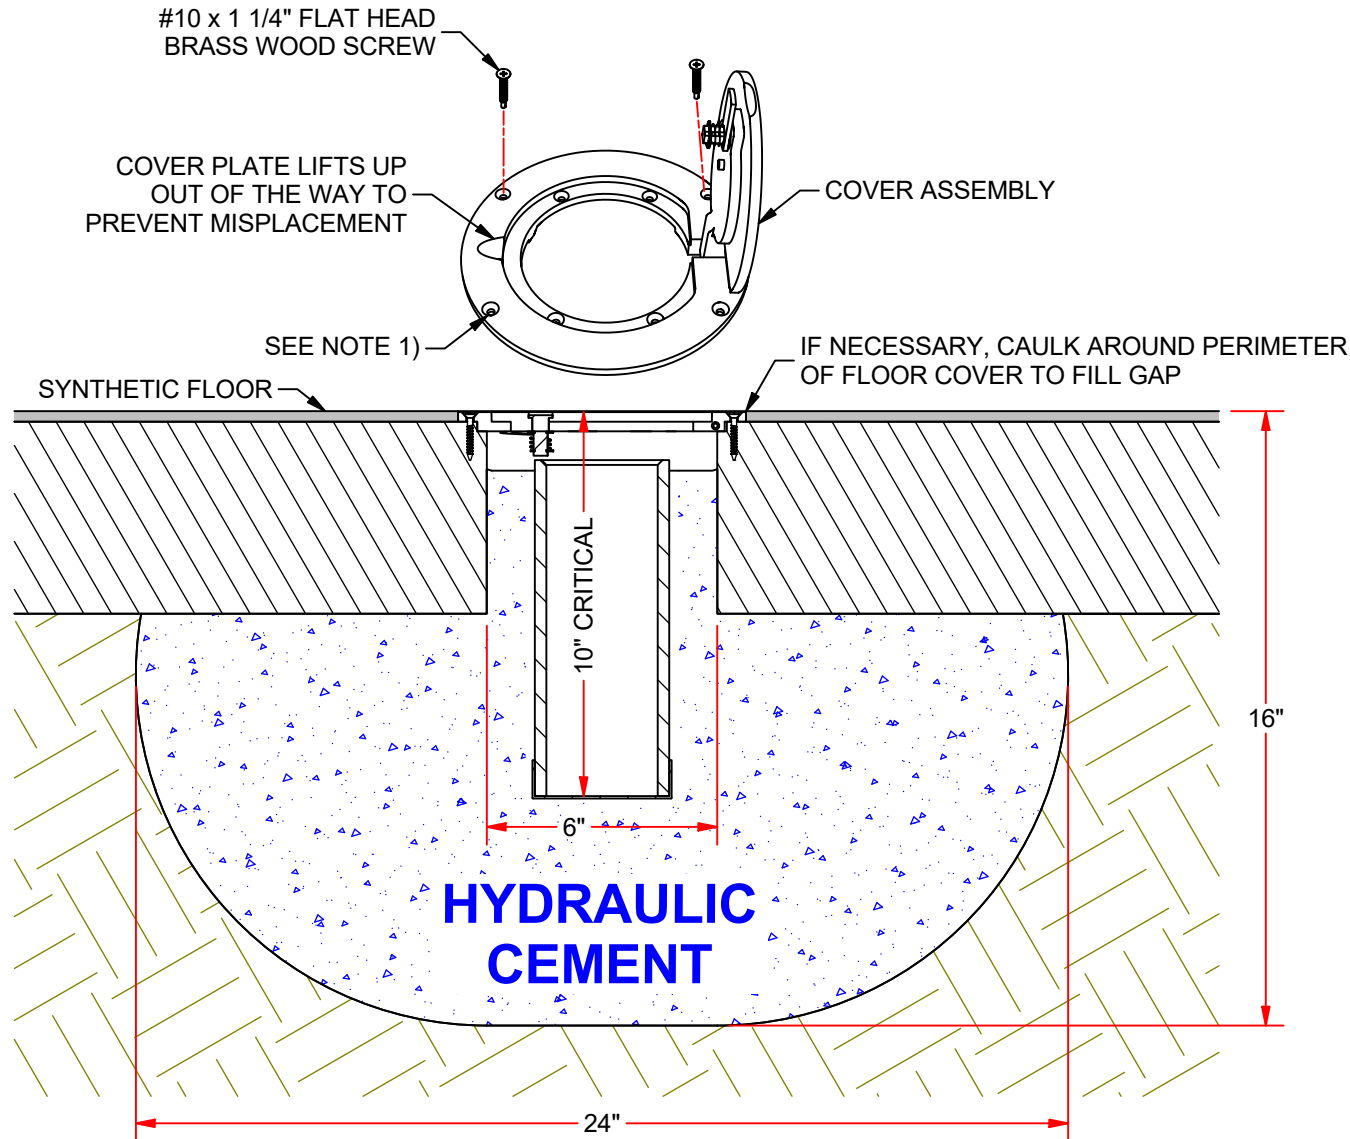

NOTES:

1) USE A STRUCTURED CONCRETE ADHESIVE TO BOND SCREWS. THE INNER HOLES ARE NOT UTILIZED.

 <p>976 Hartford Turnpike Waterford, CT 06385 USA (800)243-0533 Fax: (800)988-3363 www.jaypro.com</p>	MODEL NUMBER: BSO-2G	CHECKED BY: WVB
	PRODUCT NAME: INDOOR 2-3/8 ID FLOOR SLEEVE	
DATE: 9/10/2019	REV: -	DRAWN BY: Moune T.
		SHEET: 2 OF 2