4 3


48"


NOTES:


1. FOR SAFE OPERATION AND CONTINUED HIGH PERFORMANCE FROM THIS EQUIPMENT, INSPECTION AND MAINTENANCE MUST BE PERFORMED BEFORE EACH USE.

2. USE OF THIS EQUIPMENT, OTHER THAN INTENDED, MAY BE HAZARDOUS.

3. ALTERATION OR MODIFICATION OF THIS EQUIPMENT MAY BE HAZARDOUS.

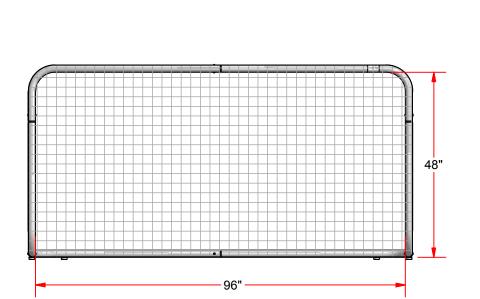


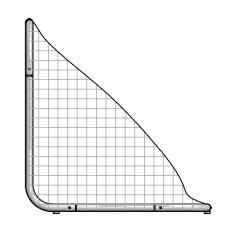



ITEM # 8 IS PRE-INSTALLED SLIDE PIPES TOGETHER AS SHOWN

	Parts List							
ITEM	QTY	PART NUMBER	DESCRIPTION					
1	1	SMG-81A	LOWER CROSSBAR W/ FEET					
2	1	SMG-81B	LOWER CROSSBAR W/ FEET W/ SWAGE END					
3	1	SMG-82A	UPPER CROSSBAR					
4	1	SMG-82B	UPPER CROSSBAR W/ SWAGE END					
5	2	SMG-83A	FRONT UPRIGHT W/ FEET					
6	2	SMG-83B	MIDDLE CROSSBAR					
7	1	SMG-8NHP	4" SQUARE, 3 mm ORANGE POLYETHYLENE NETTING					
8	8	HM5051	SNAP BUTTON CLIP ON (PRE-INSTALLED)					

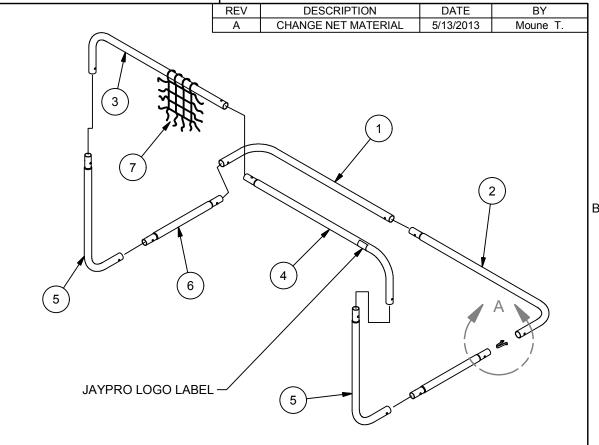

ASSEMBLY INSTRUCTIONS:

- 1. NET IS ATTACHED BY WEAVING FRAME PIPES IN AND OUT OF THE PERIMETER OF THE NET.
- 2. ASSEMBLE TOP CROSSBAR (3,4) AND BOTH SIDE FRAMES (5, 6). NOTE THAT LOWER CROSSBAR MEMBERS HAVE RUBBER "FOOT" PADS.
- 3. LAY NET OUT ON FLAT SURFACE AND DETERMINE TOP AND BOTTOM EDGES.
- 4. GRADUALLY WEAVE THE TOP CROSSBAR THROUGH THE TOP OF NET.
- 5. GRADUALLY WEAVE ONE SIDE FRAME THROUGH THE SIDE OF THE NET. ATTACH THE SIDE FRAME TO THE TOP CROSSBAR.
- 6. REPEAT STEP 5 FOR OTHER SIDE.
- 7. GRADUALLY WEAVE ONE REAR CROSSBAR MEMBER (1, 2) AT A TIME THROUGH THE BOTTOM OF THE NET.
- 8. ASSEMBLE BOTH REAR CROSSBAR MEMBERS TOGETHER.
- 9. ATTACH REAR CROSSBAR TO EACH SIDE FRAME.

% /iaypro	MODEL NUMBER: SMG-8HP			CHECKED BY: WVB	
SPOIT (S* BNOVATION, PERFORMANCE AND COMMITMENT SINCE 1953	PRODUCT NAME:				
976 Hartford Turnpike	MINI SOCCER GOAL				
Waterford, CT 06385 USA (800)243-0533 Fax: (800)988-3363 www.jaypro.com	DATE: 5/13/2013	REV:	DRAWN BY: Moune T.	SHEET: 1 OF 1	

2