


WIRE GRID TAB FITS OVER AND ONTO THE BOTTOM GRID FOR EACH SIDE PANEL

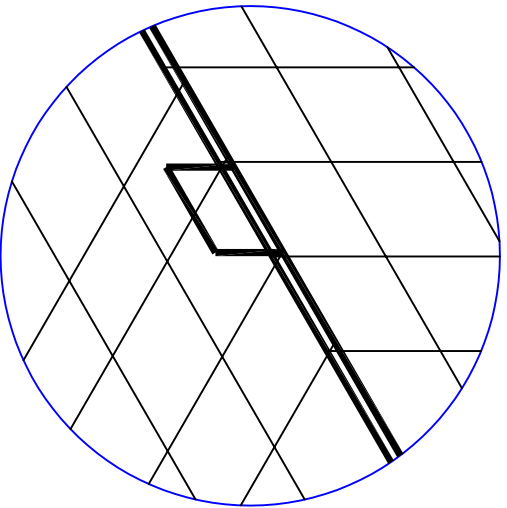

VIEW A-A

<p>Jaypro Sports 976 Hartford Turnpike Waterford, CT 06385 USA (800)243-0533 (800)988-3363 Fax www.jaypro.com</p>		<p>MODEL NO.: TE-60</p>
<p>PRODUCT NAME: TOTEMASTER PLUS</p>		<p>DRAWN BY: JAC</p>
<p>EFFECTIVE DATE: 3-19-03</p>		

JAYPRO SPORTS
TOTEMASTER PLUS, TE-60
LIST OF MATERIALS

<u>PIECE NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1		END PANEL	2
2		SIDE PANEL WITH COVERS	1
3		BOTTOM PANEL	1
4		CENTER PANEL	1
5		SIDE PANEL	1
6		PAN HEAD PHIL M6 x 22MM	12
7	CS0007	CASTER SOCKET	4
8	CS0006	CASTER STEM	4

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED: PHILLIPS HEAD SCREWDRIVER
RUBBER HEAD MALLET

- 1) ALIGN ONE END PANEL (1) WITH BOTH SIDE PANELS (2 +5) AND LOOSELY ASSEMBLE USING THE ROUND HEAD SCREWS (6). MAKE SURE THE SIDE PANEL WITH COVERS (2) IS PROPERLY POSITIONED SO THE COVERS WILL CLOSE CORRECTLY.

- 2) LAY THE BOTTOM PANEL (3) INTO PLACE MAKING SURE THE WIRE GRID TABS FIT ONTO EACH SIDE PANEL (2+5) AS SHOWN IN VIEW A-A. POSITION THE CENTER PANEL (4) SO IT RESTS ON THE BOTTOM PANEL (3) AND LOCKS ONTO EACH SIDE PANEL (2 +5).

- 3) ALIGN THE SECOND END PANEL (1) AND FASTEN IN PLACE WITH THE HARDWARE PROVIDED. TIGHTEN ALL FASTENERS FIRMLY. LAY UNIT ONTO ITS SIDE AND ASSEMBLE SOCKET INSERTS (7) AND CASTERS (8).