
VMH-13

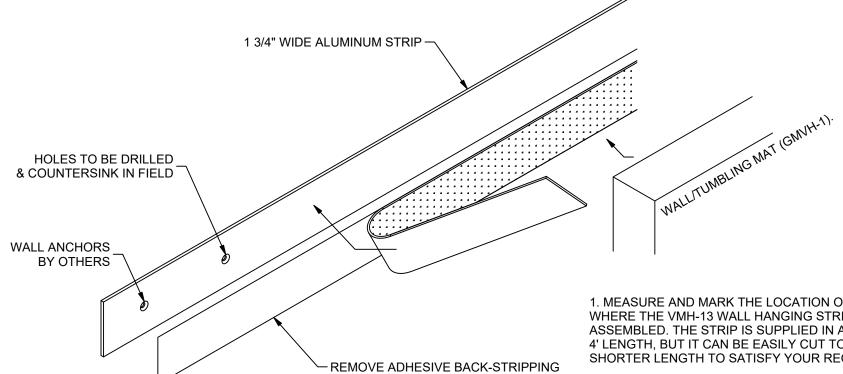

PLEASE NOTE:

- 1) FOR SAFE OPERATION AND CONTINUED HIGH PERFORMANCE FROM THIS EQUIPMENT, INSPECTION AND MAINTENANCE MUST BE PERFORMED BEFORE EACH USE
- 2) USE OF THIS EQUIPMENT OTHER THAN INTENDED, MAY BE HAZARDOUS.
- 3) ALTERATION OR MODIFICATION OF EQUIP-MENT MAY BE HAZARDOUS. FOR REPAIR OR REPLACEMENT, PLEASE CALL YOUR DEALER

- 1. MEASURE AND MARK THE LOCATION ON YOUR WALL WHERE THE VMH-13 WALL HANGING STRIP WILL BE ASSEMBLED. THE STRIP IS SUPPLIED IN A STANDARD 4' LENGTH, BUT IT CAN BE EASILY CUT TO ANY SHORTER LENGTH TO SATISFY YOUR REQUIREMENT.
- 2. DUE TO THE MANY VARIATIONS IN BUILDING AND WALL CONSTRUCTION, NO FASTENERS ARE SUPPLIED. SUITABLE FASTENERS DESIGNED TO PROVIDE MAXIMUM HOLDING POWER MUST BE SUPPLIED BY THE INSTALLER. THE ALUMINUM STRIP SHOULD BE DRILLED AND COUNTERSUNK TO ALLOW A FLUSH FIT FOR THE FASTENERS.
- 3. FOR BEST RESULTS, CLEAN THE ALUMINUM STRIP WITH ALCOHOL, ACETONE OR ANY QUICK EVAPORATING SOLVENT. ALLOW IT TO THOROUGHLY DRY BEFORE APPLYING PRESSURE SENSITIVE VELCRO-TYPE STRIP. PRESS FIRMLY ONTO ALUMINUM AND ALLOW THE ADHESIVE TO SET FOR 60 MINUTES BEFORE USING. APPLY IN TEMPERATURE OF 60 OR ABOVE.

