


POSITIVE ANCHORING

from **mo-clamp**
Mo-Clamp®
Collision Repair Tools



Chain Pot "T" Top II #3081

No hooks needed. Simply use torque wrench and installation tool to set pots in 3 1/2" diameter holes. Insert MoClamp ISO 9000 rated chain in slot for secure hold down capabilities.

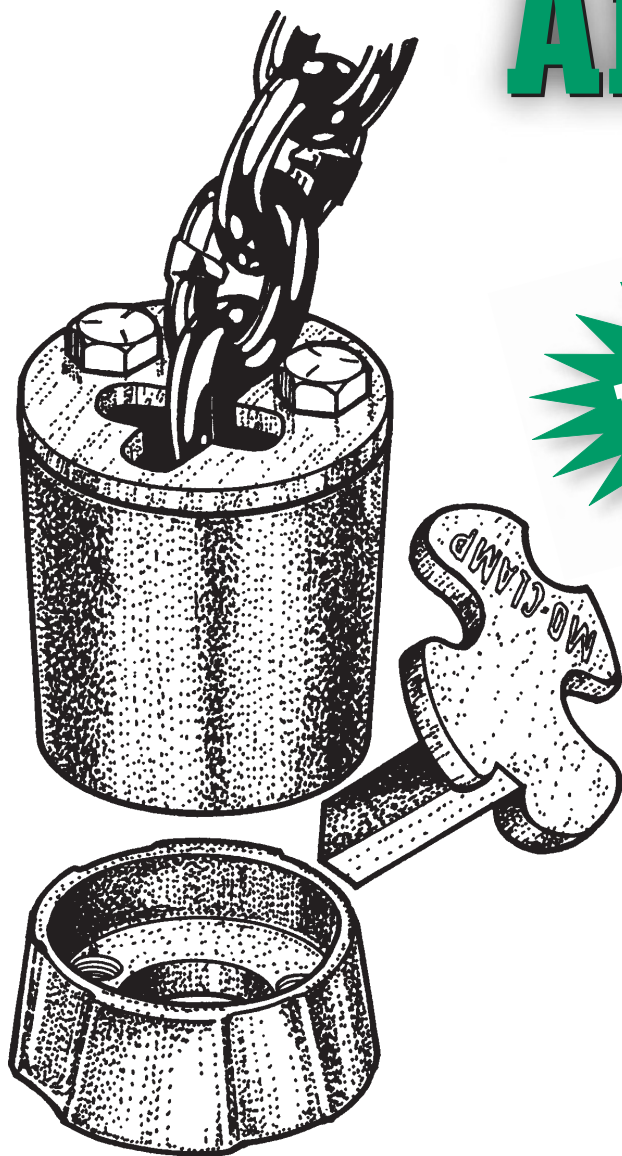

#3082 Installation tool available

- Built to withstand 10 tons
- Self-draining
- Locking cap keeps out dust and dirt
- Installs in existing floors
- Countersunk flush with floor when not in use
- Installation and usage guide available

Specifications:

Weight: 5 lbs (2.27 kg)

Capacity: 10 tons (9,072 kg)

100% Made in U.S.A.

3081DATA0799

6920 SW 111th Avenue, Beaverton, OR 97008 USA
1-800-678-5548 • (503) 644-9167 • Fax (503) 644-2733
www.moclamp.com email: sales@moclamp.com

© Pull-It Corporation

mo-clamp
Mo-Clamp®
Collision Repair Tools