

QUANTUM™ STORAGE SYSTEMS

1 (800) 685-4665

MODULAR WIRE BASKETS


CAUTION

- * DO NOT OVERLOAD BINS
- * IF STACKED ON OPTIONAL MOBILE BASE, USE CAUTION WHEN MOVING
- * MAKE CERTAIN SIDE PANELS ARE PROPERLY ATTACHED BEFORE STACKING

INSTRUCTIONS

Stacking Wire Bin

- A) Hook Side Panel onto back of Wire Bin (1), then hook onto front edge (3) while pushing front of Bin in (2).
- B) Repeat for opposite Side Panel.

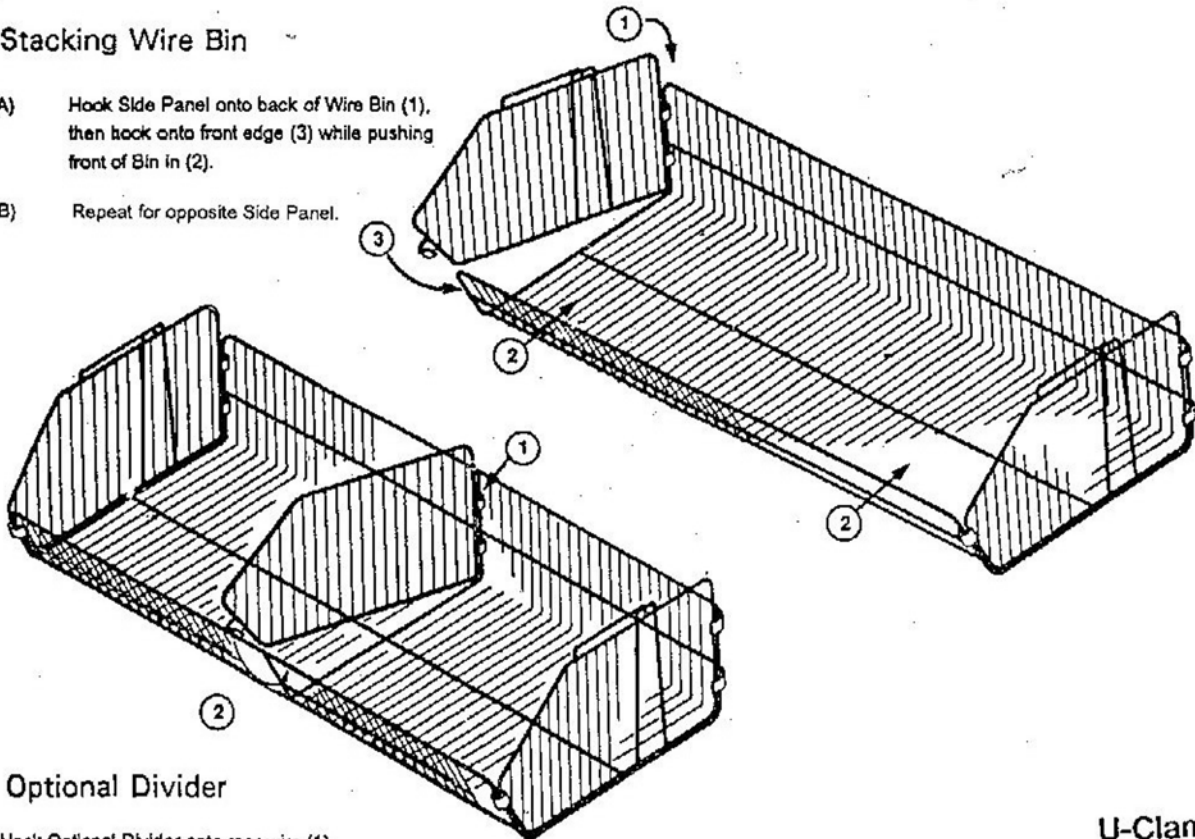

Optional Divider

Hook Optional Divider onto rear wire (1), then hook onto front wire (2).

If Stacking Onto Another Unit...

Affix to one another with (2) U-Clamps, Square Neck Bolts and Wingnuts per side.

