


# Measuring Guide

## Bostonian & Chicago

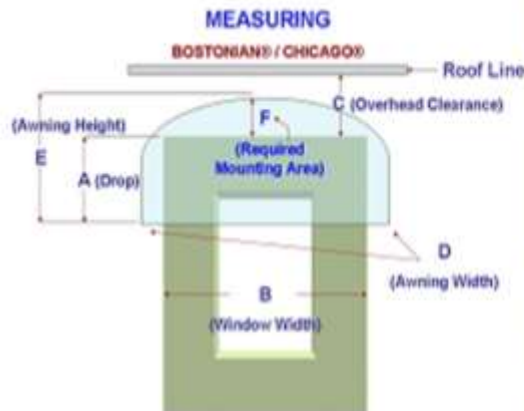

Valance Height (included in measurements)

Residential = 7"

Commercial = 10"

### BOSTONIAN<sup>®</sup> SERIES MEASURING REQUIREMENTS

- Hint: If you wish to have your Bostonian<sup>®</sup> awning come down over the window (A), purchase one size larger than your window size. This will require less overhead clearance (C).
- C - Bostonian<sup>®</sup> Series awnings require a greater amount of overhead clearance (C) than other awnings. The formula for C is (E minus value for #1, #2 or #3 below)
- #1 A - 13" Maximum Drop (frame) Allowed for Window or In-swinging Door
- #2 A - 0" Maximum Drop Over Out-Swinging Door (for awnings less than 3' deep)
- #3 A - 7" Maximum Drop Over Out-Swinging Door (For awnings 3' deep or greater)
- D - Every awning is 4.5" wider than the window size it is representing. This is for mounting purposes. (Example: 3' Bostonian<sup>®</sup> is actually 40.5" wide)

### CHICAGO<sup>®</sup> SERIES MEASURING REQUIREMENTS

- C - Chicago<sup>®</sup> Series awnings require a greater amount of overhead clearance than other awnings. The formula for C is (E minus value for #4, #5 or #6 below)
- #4 F - 6" Minimum Mounting Space Required Above Window or In-swinging Door
- #5 A - 13" Maximum Drop Allowed for Window or In-swinging Door
- #6 A - 0" Maximum Drop Over Out-Swinging Door (for awnings less than 3' deep)
- A - 7" Maximum Drop Over Out-Swinging Door (For awnings 3' deep or greater) (#6)
- D - Every awning is 4.5" wider than the window size it is representing. This is for mounting purposes. (Example: 3' Chicago<sup>®</sup> is actually 40.5" wide)