



Customer Service  
(800) 247-7668

# BM10


## Set-up Instructions Competition Badminton System

PARTS LIST					
Item	Qty	Description	Item	Qty	Description
A	2	Badminton Post (BM10U)	B	1	Badminton Net (BM10N)

- ◆ Inspect all contents prior to installation. Report any missing parts to dealer immediately.
- ◆ Read all instructions before proceeding.

- 1) Open up the brass floor cover plates (BM30-CV) in the floor, and insert the Badminton Posts (A) into the Floor Sleeves (BM21).
- 2) Use a tape measure to measure the height of the Badminton Posts (A) from floor surface to the groove where the top net rope will sit. This measurement should be 5'1". If it is not, remove the post and adjust the Bottom Adjustment Pad (C) to achieve the desired 5'1". See Figure 1.
- 3) Take the top rope of the Badminton Net (B), feed it through the groove on the top cap, and pull it down through the Rope Cleat below. From the other Badminton Post (A), pull the top rope toward you, through the top groove, and down through the rope cleat to get initial tension. See Figure 1.
- 4) Use a tape measure to measure the net height at center court. It should be 5'. If it is too low, pull tighter through the rope cleat on one of the Badminton Posts (A) until height is achieved. See Figure 1.
- 5) Tie the top corner laces of the Badminton Net (B) around the posts above the Rope Cleats. Tie the lower corner laces around the Badminton Posts (A) and through the stainless steel rope guides. See Figure 1.
- 6) At this point, you should be ready for play. If net height has still not been achieved, disconnect the net and raise/lower the posts using the Bottom Adjustment Pad (C) until proper 5' net height has been attained. See Figure 1.

Figure 1

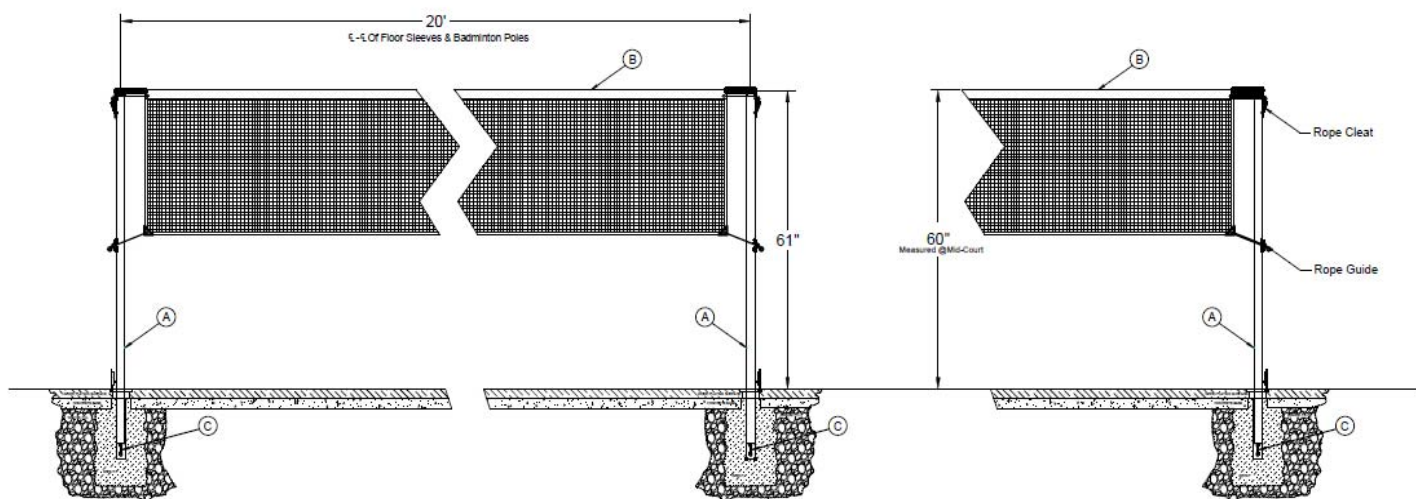

# BADMINTON COURT LAYOUTS

## SINGLES AND DOUBLES

(Stand-Alone Courts)

**Net Height: 5 feet**

