

RUBBER BASE MOULDING



NOTE: Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 24 hours of receipt. To report information regarding damages or if you have any questions, please call 877-348-9663.



Product images are for illustrative purposes only and may differ from actual product.

TOOLS NEEDED




Sanding Block



Drill



Corner Brace
206513

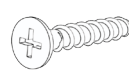

#8 x 1/4" Screw
100378



Rubber Base Moulding
(By Foot) 100283

Installers need to purchase their own contact cement. DWI recommends using 3M™ Fastbond Contact Adhesive 30NF.




ASSEMBLY

1. DWI recommends roughening the surface of the wood base before applying the rubber base board with rubber/contact cement. This removes some of the finish, to assist in adherence of the rubber cement.



2. Please follow contact cements manufacturer's instructions fully to apply the base molding.

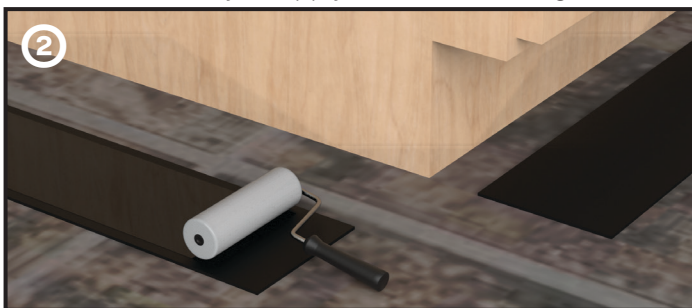

3. Attach Rubber Moulding to the base of the cabinet, using contact cement.



4. Attach the stainless-steel corner bracket with the screws provided.

