









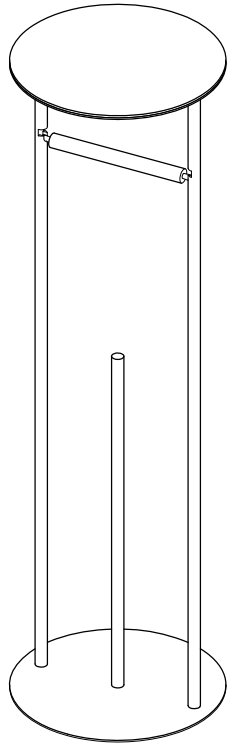


KINGSTON

KITCHEN & BATH

Pedestal Toilet Paper Holder Installation



Parts:

Long Column	Short Column	Bottom Plate	Washer	Bolt
A  2 Pcs	B  1 Pc	C  1 Pc	D  3 Pcs	E  3 Pcs
Top Plate	Flat Screw	Buffer Pad	Bumper	Toilet Paper Holder
F  1 Pc	G  2 Pcs	H  1 Pc	I  4 Pcs	J  1 Pc

www.kingstonbrass.com
 TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
 TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
 12775 Reservoir Street, Chino, CA 91710


TOOLS REQUIRED



Allen Wrench



Phillips Screwdriver

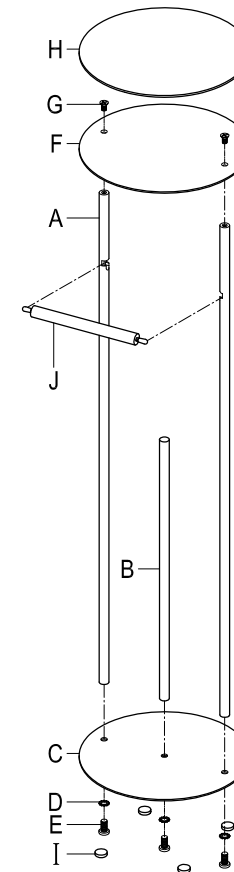

Installation Steps:

- Step 1. Insert washers (D) onto bolts (E) and thread all 3 bolts from the bottom part of the bottom plate (C) to secure the long Columns (A) on the 2 outermost holes making sure to point the center holes facing each other, attach short column (B) on the center of the plate, tighten using Allen wrench.
- Step 2. Place top plate (F) on top of the long columns (A) and secure using the flat screws (G) using a Philips head screw driver.
- Step 3. Cover top plate (F) with buffer pad (H), Insert toilet paper holder (J) on the center holes on the long columns (A).
- Step 4. Attach the self-adhesive bumpers (I) on the bottom of the lower plate.

Cleaning

Clean with a damp cloth only.
 Avoid using metal or abrasive polishes.